

STM-PW

High Temp. Water Heater

Date: Oct. 2024

Version: Ver.K



Contents

1. General Description	6
1.1 Coding Principle.....	7
1.2 Feature	7
1.3 Options	8
1.4 Reference Formula of Mould Controllers Model Selection.....	9
1.5 Safety Regulations.....	9
1.5.1 Safety Signs and Labels.....	9
1.5.2 Signs and Labels.....	10
1.5.3 Operation Regulations.....	11
1.6 Exemption Clause.....	12
2. Structure Characteristics and Working Principle.....	13
2.1 Working Principle.....	13
3. Installation and Debugging	14
3.1 Installation Space.....	14
3.2 Pipe Connection.....	14
3.3 Power Connection.....	15
3.4 Options Installation	16
3.4.1 Installation steps for options water manifold (dewaxing)	16
3.4.2 Installation steps for options water manifold (welding)	17
4. Operation Guide	18
4.1 Machine Startup.....	18
4.2 Main Screen.....	18
4.2.1 Standby Screen.....	18
4.2.1 Operation Screen	20
4.3 User Setting.....	20
4.3.1 User Parameter Settings	20
4.3.2 Action Setting	22
4.3.3 Clock Timing.....	22
4.3.4 System Setting	24
4.3.5 Data Download.....	24
4.3.6 Advanced Setting	25
4.4 Current Fault Inquiry	31

4.5	Inquiry Screen.....	31
4.5.1	History Fault Inquiry.....	31
4.5.2	Data Inquiry	32
4.5.3	Output Inquiry	32
4.5.4	Input Inquiry.....	32
4.5.5	Version Inquiry	33
4.6	Password Management	33
4.6.1	Login.....	33
4.6.2	Password Modification.....	33
4.6.3	Factory Setting	34
4.7	Controller Exception List	39
5.	Trouble-shooting.....	45
6.	Maintenance and Repair	48
6.1	Open the Covers.....	49
6.2	Y Type Strainer	50
6.3	Solenoid Valve	50
6.4	Pipe Heater.....	50
6.5	Maintenance Schedule	52
6.5.1	About the Machine.....	52
6.5.2	Installation & Inspection.....	52
6.5.3	Daily Checking	52
6.5.4	Weekly Checking.....	52
6.5.5	Trimonthly Checking.....	52
6.5.6	Half-yearly Checking	52
6.5.7	Yearly Checking	53
6.5.8	3 year Checking	53

Table Index

Table 3-1:	Cooling Water Inlet and Outlet Specification.....	15
Table 4-1:	Standby Screen Specifications	19
Table 4-2:	Operation Screen Specification	20
Table 4-3:	User Parameter Specification	21
Table 4-4:	Project Parameter Description	26

Table 4-5: Current Fault Inquiry Screen Icon Key Description	31
Table 4-6: User and Password Function.....	33
Table 4-7: Default Parameters and Meanings	37

Picture Index

Picture 1-1: STM-PW.....	6
Picture 2-1: Working Principle	13
Picture 3-1: Installation Space	14
Picture 3-2: Pipe Connection	15
Picture 4-1: Startup Screen.....	18
Picture 4-2: Standby Screen	18
Picture 4-3: Operation Screen	20
Picture 4-4: User Setting Screen	20
Picture 4-5: User Parameter Screen	21
Picture 4-6: Action Setting Screen	22
Picture 4-7: Clock Timing Screen.....	22
Picture 4-8: Set Timing Switch Screen.....	23
Picture 4-9: Timer Inquiry and Modification Screen	23
Picture 4-10: System Setting Screen	24
Picture 4-11: Data Download Screen.....	24
Picture 4-12: Temp. Data Download Screen.....	24
Picture 4-13: Alarm Record Download Screen.....	25
Picture 4-14: Project Screen	25
Picture 4-15: Project Parameter Setting Screen	26
Picture 4-16: Password Mgmt. Screen.....	30
Picture 4-17: Factory Setting Screen	30
Picture 4-18: Current Fault Screen	31
Picture 4-19: History Fault Inquiry Screen	32
Picture 4-20: Data Inquiry Screen	32
Picture 4-21: Output Inquiry Screen.....	32
Picture 4-22: Input Inquiry Screen.....	33
Picture 4-23: Version Inquiry Screen	33
Picture 4-24: Modifying User Password Screen.....	34

Picture 4-25: Factory Setting Screen	35
Picture 4-26: Manufacturer Parameter Settings.....	35
Picture 4-27: Parameter Initialization Screen.....	35
Picture 4-28: Fault Clearing Screen.....	36
Picture 4-29: Manufacturer Debugging Screen.....	36
Picture 4-30: Password Mgmt. Screen.....	36
Picture 6-1: Open the Covers 1	49
Picture 6-2: Open the Covers 2	49
Picture 6-3: Open the Covers 3	49
Picture 6-4: Y Type Strainer	50
Picture 6-5: Solenoid Valve	50
Picture 6-6: Pipe Heater Cleaning	51

1. General Description




Read this manual carefully before operation to prevent damage of the machine or personal injuries.

STM-PW series high temp. water heaters are used to heat up the mould and maintain temperature, they can be used in other similar applications as well. High temp. water from mould through high-temp. heating pipe after it is pressurized by pump returns to the mould, which is cooled indirectly for heating and constant temperature purpose. With PID temperature control, it could ensure stable temperature control with accuracy reaching $180\pm 0.5^{\circ}\text{C}$.



Picture 1-1: STM-PW

1.1 Coding Principle

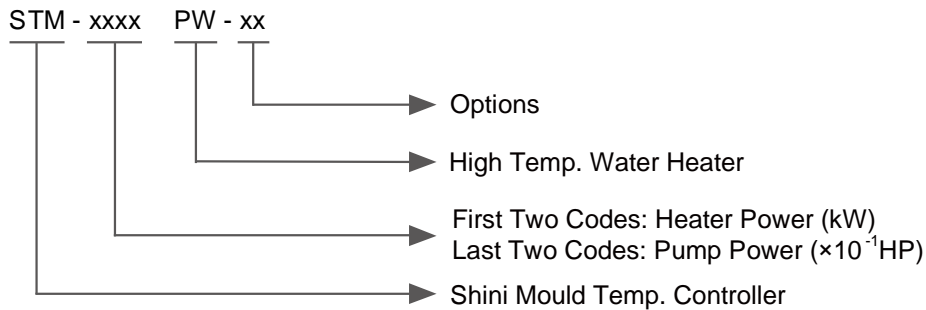

1.2 Feature

- I P.I.D. multi-stage temperature control system can maintain a mould temperature with accuracy of $\pm 0.5^{\circ}\text{C}$.
- I SSR solid status relay control;
- I Adopts high efficiency water cycle magnetic pump, with which precise moulds and mould loop with minor diameter can achieve precise temperature control and high efficient heat exchange. Pump inside adopts stainless steel to avoid explosion.
- I Multiple safety devices including power reverse phase protection, pump overload protection, overheat protection and low level protection that can automatically detect abnormal performance and indicate this via scrolling lights on screen.
- I The highest temperature can reach 180°C .
- I Equipped with high pressure protection, safety pressure relieving, automatic water supplying and air exhausting.
- I Plate exchanger indirect cooling ensures precision temp. control, and the system can achieve quick heat exchanging with the low viscosity of water.
- I RS485 communication function is standard.
- I Equipped with water level probe and high-pressure plunger pump .The water level probe can accurately detect the water level . When the system level is too low, the plunger pump to supply the high pressure system with water to avoid pipe dry burning.
- I Standard equipped with buzzer.
- I Adopt non-contact heater, and the heater will not be affected by water quality.
- I Equipped with pressure sensor for intuitive display of the controller;

1.3 Options

- I For models optional with magnetic filter to prolong the service life the magnetic pump, and add “MF” at the end of the model code.
- I For models optional with mould return water temperature display function, add “TS” at the end of the model code.
- I For models optional with air-blowing function, add "A" at the end of the model code.
- I For models with optional leakage protection switch, add “CB” at the end of the model code (The options of STM-PW are all labeled as CB).

All service work should be carried out by a person with technical training or corresponding professional experience. The manual contains instructions for both handling and servicing. Chapter 6, which contains service instructions intended for service engineers. Other chapters contain instructions for the daily operator.

Any modifications of the machine must be approved by SHINI in order to avoid personal injury and damage to machine. We shall not be liable for any damage caused by unauthorized change of the machine.

Our company provides excellent after-sales service. Should you have any problem during using the machine, please contact the company or the local vendor.

Shini Hotline Service:

Headquarter and Taipei factory:

Tel: + 886 (0)2 2680 9119

Shini Plastics Technologies (Dongguan), Inc.:

Tel: +86 (0)769 8331 3588

Shini Plastics Technologies (Pinghu), Inc.:

Tel: +86 (0)573 8522 5288

Shinden Precision Machinery (Chongqing), Inc.:

+86 (0)23 6431 0898

1.4 Reference Formula of Mould Controllers Model Selection

Heater Power (kW) = mould weight (kg) × mould specific heat (kcal/kg °C) × temperature difference between mould and environment (°C) × safety coefficient / heating duration / 860

Note: safety coefficient can select a value from 1.3 to 1.5.

Flow Rate (L/min) = heater power (kw) × 860 / [heating medium specific (kcal/kg °C) × heating medium density (kg/L) × in/outlet temperature difference (°C) × time (60)]

Note: Water specific heat =1kcal/kg °C

Heating medium oil specific heat =0.49kcal/kg °C

Water density =1kg/L

Heating medium oil density =0.842kg/L

1.5 Safety Regulations

Strictly abide by the following safety regulations to prevent damage of the machine or personal injuries.

1.5.1 Safety Signs and Labels



Danger!

The unit is designed to endure high temp, and high pressure. For safe operation, do not remove the covers or switches.



Attention!

The unit should be operated by qualified personnel only.

During operation, avoid wearing gloves or clothes that may cause danger.

Turn off main switch when power supply is off.

Stop the unit when there may be power supply problems caused by static electricity.

Put on safety gloves and shoes during installation or relocation.

Components from our company can only be used for replacement.



Warning!

Do not touch the switch with wet object or hands.

- Do not use the machine before fully aware of its performance.
- Be careful not to touch or hit the switch or sensor.
- Please keep enough operation space, and keep away obstacles.
- To avoid producing statics, clean the floor from oil or water to keep a dry environment.
- Protect the machine against severe vibration or collision.
- Do not remove safety signs or make it dirty.
- Drunken, medicine-taking, or men without proper judgement should not operate the machine.




Warning!

All screws that used for installing electrical components in the control box must be locked tightly, which doesn't need regular inspection!

1.5.2 Signs and Labels

	<p>From mould: connector for circulating water/oil coming from mould.</p>
	<p>Pump pressure meter: indicating actual pressure of system.</p>
	<p>To mold: connector for circulating water/ oil to go to mould.</p>
	<ol style="list-style-type: none"> To maintain temperature consistency, cooling water pressure must be higher than 2 bar at all time, but should never exceed 5 bar in any case. Clean Y-shape Cooling Water Strainer periodically to ensure perfect cooling capacity.
	<p>Water outlet: drainage outlet.</p>

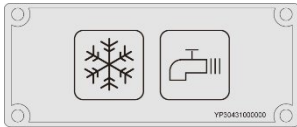

Water inlet: inlet for replenishing water and cooling water.

1.5.3 Operation Regulations

- 1) Before operation, make sure that cooling water is clean soft water without pollutants.
 - ※ Low quality water brings limescales, which may cause problems.
 - ※ If the water quality is not good, the heating pipe will break, the pump impeller will damage, and the flow will reduce, thus leading to the temp. can not rise.
- 2) If problems of drainage or bad temperature control are noted, please clean solenoid valve and cooling water inlet and outlet.
- 3) Do not move the unit when it is in operation.
- 4) When in need of repairing, wait until oil temperature falls below 30°C.
- 5) The water heater has pump overload device: When it is overloaded, the pump and pipe heater will both stop. At this time, check the cause of pump overload (phase loss, pipe blockage, bearing damage, etc.). After everything is normal, reset the overload protector (RESET) to resume work.

The water heater equips pump overheat protector:
After everything becomes normal, cool the pump to normal temp., and then resume its operation.
- 6) Before turn off the pump, wait until water temp. falls below 50°C. Or the life of the unit would be affected.
- 7) To ensure the stability of heating temp., the cooling water pressure should be 2~5kg/cm².
- 8) If the working temp. is below 100 °C, it can set the pressure switch to 1.5~2bar; If the working temp. is set at 100 °C ~180 °C, it's recommended to set the value to 2.8bar; The pressure switch parameters have been set before delivery. If the cooling water pressure is too low, please adjust the pressure switch set value within the specified parameter range to achieve the effect (But it may affect the working temp. or lead to unstable temp. control), but don't change it unauthorizably. As a result, it may result in

failure, which will not be included in the warranty.

- 9) Please connect the cooling water outlet with high temperature resistant pipe when temperature is above 100°C.

1.6 Exemption Clause


The following statements clarify the responsibilities and regulations born by any buyer or user who purchases products and accessories from Shini (including employees and agents).

Shini is exempted from liability for any costs, fees, claims and losses caused by reasons below:

1. Any careless or man-made installations, operation and maintenances upon machines without referring to the Manual prior to machine using.
2. Any incidents beyond human reasonable controls, which include man-made vicious or deliberate damages or abnormal power, and machine faults caused by irresistible natural disasters including fire, flood, storm and earthquake.
3. Any operational actions that are not authorized by Shini upon machine, including adding or replacing accessories, dismantling, delivering or repairing.
4. Employing consumables or oil media that are not appointed by Shini.

2. Structure Characteristics and Working Principle

2.1 Working Principle

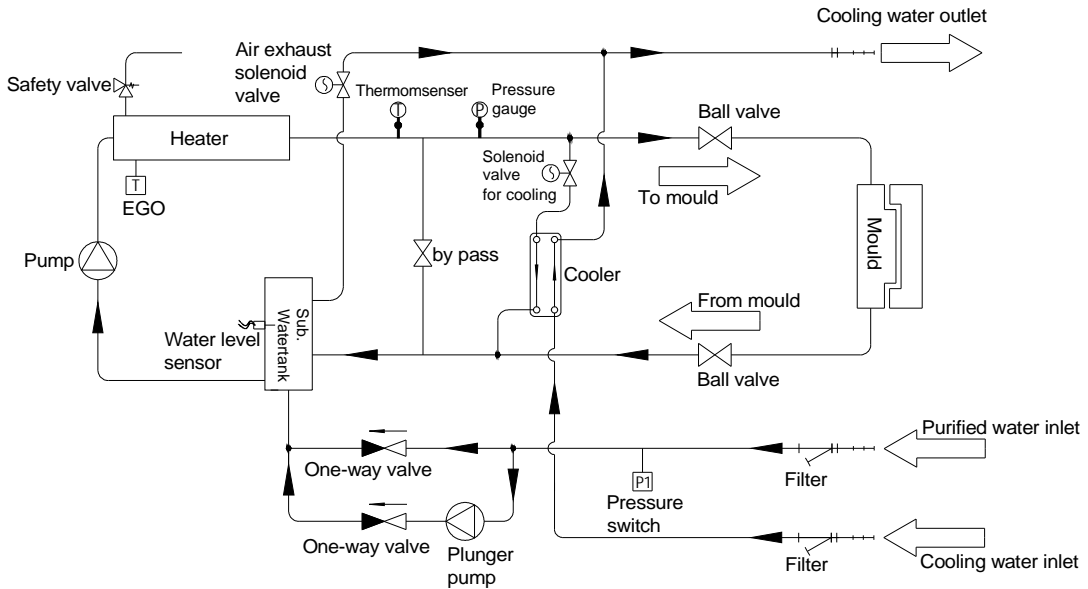

Picture 2-1: Working Principle

The high-temp. water from the mould returns to the pump inlet through the pipe, pressurized by the pump and then is sent to the heater, which is delivered to the mould after being heated by the pipe heater, so as to circulate. In this process, if the level sensor detects that the liquid level drops to the set value, the machine will start the plunger pump to refill water for 30 secs., and if it is still at low liquid level after 30 secs., the machine will give alarm to shut down. If the water temp. is too high, the system will start the cooling solenoid valve, and the cooling water will enter the double sleeve pipe on the heating tank to cool down the high-temp. water and decrease the high water temp., so as to achieve the purpose of constant temp. control. If the water temp. keeps increasing and it reaches the EGO (overheat protector) set value, the system will give high temp. alarm and shut down. When the system pressure is too high and it exceeds the set value of high pressure switch, the machine will release the pressure. If the pressure continues to rise and reaches the safety valve set value, the mechanical safety valve will open to release the system pressure.

3. Installation and Debugging

3.1 Installation Space

During installation of the machine, keep at least 500mm installation space around the machine as shown by the picture. Do not install the machine in a position crowded with other objects. This would cause inconvenience to operation, maintenance and repair.

Do not sit on the machine.

Keep away flammable and explosive goods.



Picture 3-1: Installation Space

3.2 Pipe Connection


- 1) The inlet and outlet specifications of the heating tank and return water pipe

STM-1220PW: 3/4" PT female thread

- 2) Cooling Water Connection

Connect the cooling water inlet to the clean water source, the system inlet to the clean water source, and the cooling water outlet to the drainage port, and then turn on the water source. The cooling water flow shall not be less than 10L/Min.

Refer to GB1576-2001 *Water Quality for Industrial Boilers*

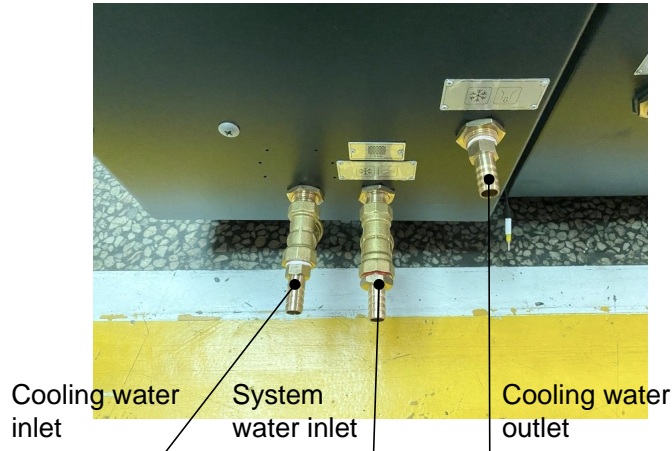

Picture 3-2: Pipe Connection

Table 3-1: Cooling Water Inlet and Outlet Specification

Model	Cooling Water Inlet	System Water Inlet	Cooling Water Outlet	Connector Type
STM-1220PW	Φ 13mm (ext. diameter)	Φ 16mm (ext. diameter)	Φ 13mm (ext. diameter)	Pagoda

Note: The cooling water inlet and outlet are shown in the figure below, and don't connect it reversely! When the service temp. is above 100 °C, the cooling water must be connected with high temp. resistant pipes.

3.3 Power Connection


The water heater needs well electrical grounding to ensure safe running of the electrical equipments.

- 1) Make sure the voltage and frequency of the power source comply with those indicated on the manufacturer nameplate that attached to the machine.
- 2) Power cable and earth connection should conform to your local regulations.
- 3) Use independent electrical wires and power switch. Diameter of electrical wire should not be less than those used in the control box.
- 4) The power cable connection terminals should be tightened securely.
- 5) The machine requires 3-phase 4-wire power source, connect the power lead (L1, L2, L3) to the live wires, and the earth (PE) to the ground.
- 6) Power supply requirements:
 Main power voltage: +/- 5%
 Main power frequency: +/- 2%

7) *Please refer to electrical drawing of each model to get the detailed power supply specifications*

3.4 Options Installation


3.4.1 Installation steps for options water manifold (dewaxing)

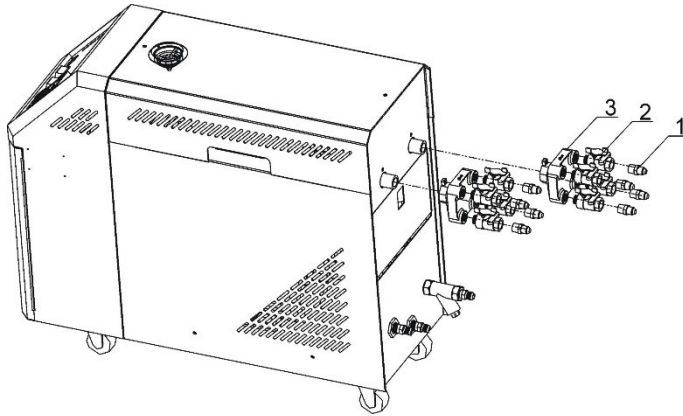

- 1) Install copper joint to the level valve.
- 2) Install level valve with copper joint to the dewaxing water manifold.
- 3) Install water manifold to the machine.
- 4) Install Teflon to copper joint.

Note: For the operating temperature not higher than 200 °C, Teflon with temperature resistance 200 °C is usable; for the operating temperature from 200 to 300 °C, must use Teflon with temperature resistance 300 °C.

3.4.2 Installation steps for options water manifold (welding)

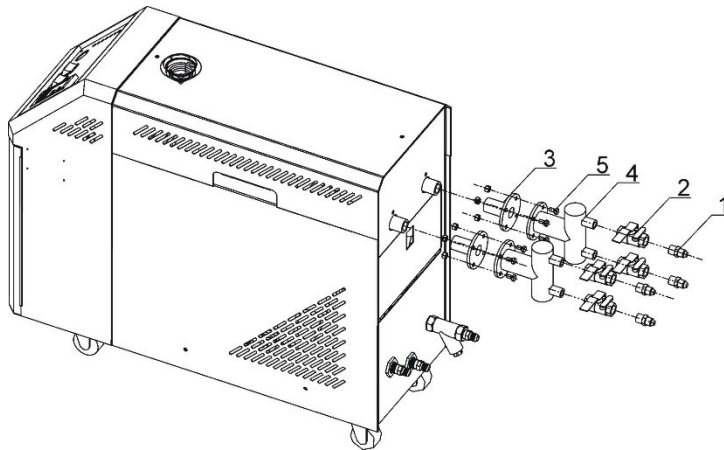

- 1) Install copper joint to the level valve.
- 2) Install level valve with copper joint to the welding water manifold.
- 3) Install water manifold to the machine.
- 4) Connect water manifold with manifold joint via screws.
- 5) Install Teflon to copper joint.

Note: For the operating temperature not higher than 200 °C, Teflon with temperature resistance 200 °C is usable; for the operating temperature from 200 to 300 °C, must use Teflon with temperature resistance 300 °C.

4. Operation Guide

4.1 Machine Startup


After the system is powered on, the panel displays the startup screen, as below:



Picture 4-1: Startup Screen



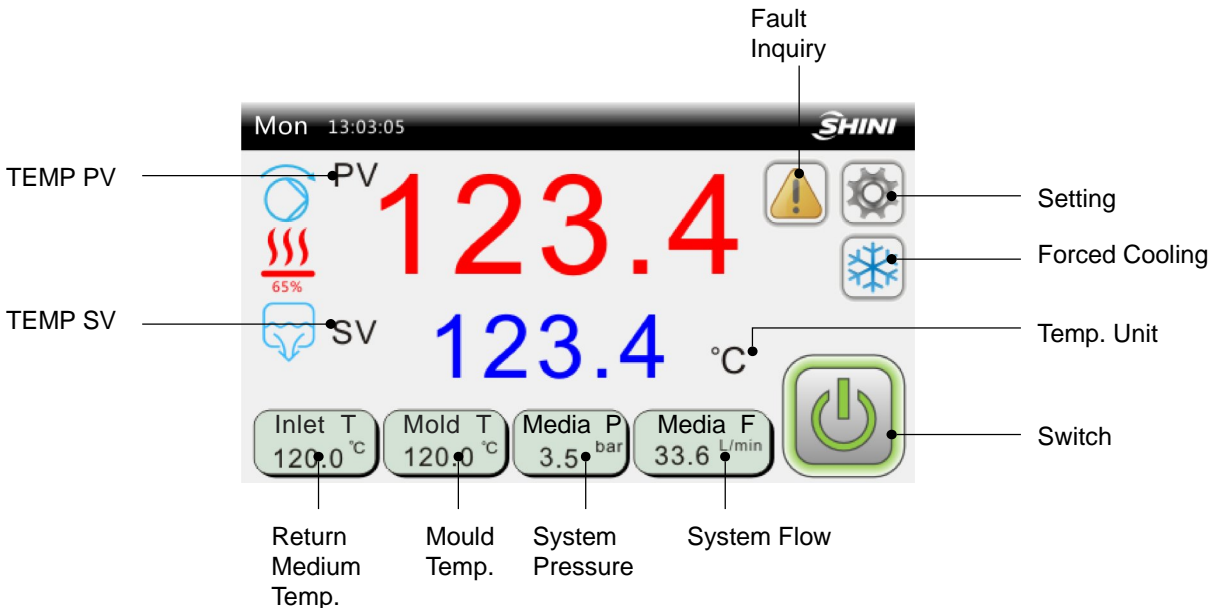

4.2 Main Screen

4.2.1 Standby Screen




Picture 4-2: Standby Screen

Table 4-1: Standby Screen Specifications

Name	Function Type	Description
Setting	key	Enter the user setting screen
Forced cooling	button	 Start the forced cooling function  Stop the forced cooling function
Temp. unit	only display	Display the set temp. unit. The unit supports °C/ shifting.
Fault inquiry	key	<ol style="list-style-type: none"> When the system fails, the main interface will flicker. At this time, click to check current fault info.; When no fault occurs at current, press it to inquire the "Historical Fault".
Switch	key	 Standby status  Running status
Return medium temp.	only display	Display the medium temp. returned from the mould, which is optional. When not selecting this function, all displays are gray.
Mould temp.	only display	Display the mould present temp., which is optional. When not selecting this function, all displays are gray.
System pressure	only display	Display the medium output pressure, which is optional. When not selecting this function, all displays are gray.
System flow	only display	Display the medium present pressure, which is optional. When not selecting this function, all displays are gray.
Temp. SV	key	Set the heating temp.
TEMP PV	only display	Display the control temp. PV

4.2.1 Operation Screen

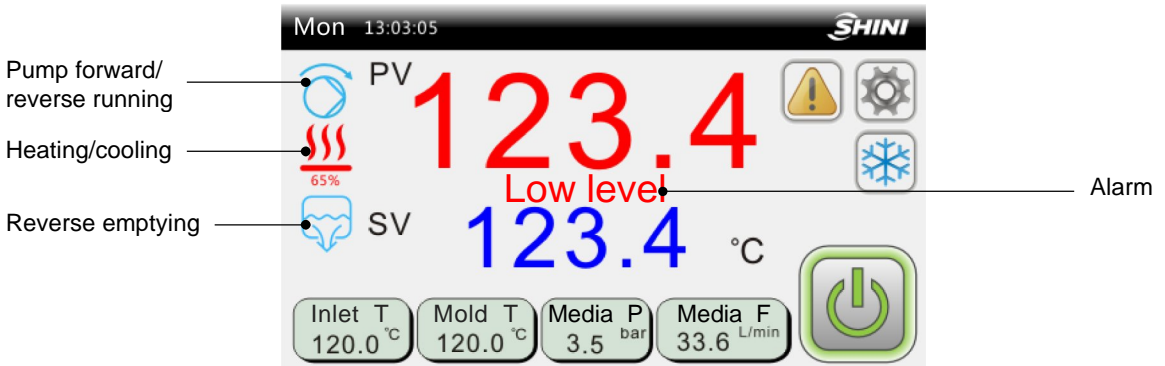

Picture 4-3: Operation Screen

Table 4-2: Operation Screen Specification

Items	Description
Pump forward / reverse running	the unit starts the pump forward / reverse running
Heating/cooling	It starts the unit temp. controlling and heating function. The bottom is heating percentage.
Reverse emptying	The unit starts emptying function
Alarm	The alarm display and indicator are on.

4.3 User Setting

In the "Operation" screen, click the < Setting > button to enter the "User Setting" screen:




Picture 4-4: User Setting Screen

4.3.1 User Parameter Settings

In the "User Setting" screen, click the < User Parameters > button to set user

parameters:

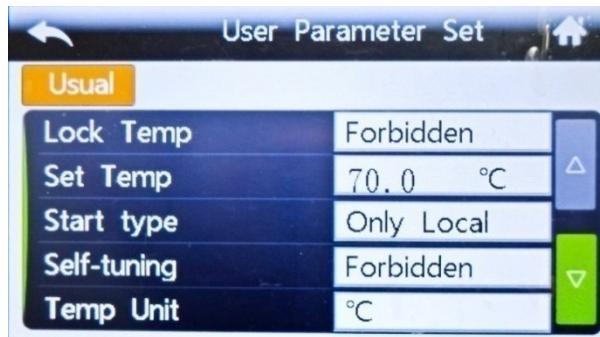

Picture 4-5: User Parameter Screen

Table 4-3: User Parameter Specification

Parameter	Initial Value	Setting Range	Unit	Remarks
Locking temp.	disable	disable- use		When selecting the “use”, it’s not allowed to set temperature on the main interface.
Setting temp.	80.0	0-180.0	°C	
Start/stop mode	local	local~local+ remote ~ remote		Local: unit startup/shutdown can only be controlled locally. Local + remote: unit startup/shutdown can only be controlled locally and remotely. Remote: unit startup/shutdown can only be controlled remotely.
Auto turning	disable	disable- enable		
Temp. Unit	°C	°C/°F		Temp. display unit
Decimal point	0.1	1/0.1		The main screen has mini. temp. unit display

4.3.2 Action Setting

In the "User Setting" screen, click the < Action Setting > button to enter the screen below:



Picture 4-6: Action Setting Screen


4.3.2.1 Reverse Emptying

After the machine stops, it will start pump reverse running and exhaust valve, which can be started and stopped manually or automatically (The factory default of reversal running time is 60S, and refer to the project parameter table for specific settings).

Note: If the reverse emptying function is on during machine running, stop the machine first, and then activate the reverse emptying action.

4.3.3 Clock Timing

Click the < Clock Timing > button in the user setting screen to enter the following screen:

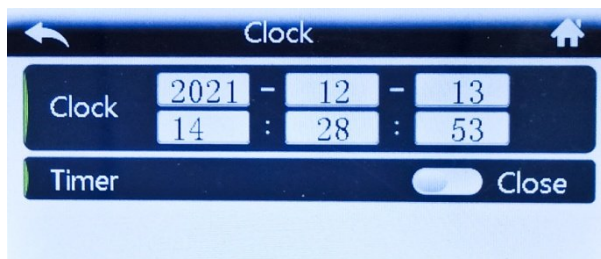


Picture 4-7: Clock Timing Screen

Timing main switch: used to select the timing on/off function, and it can inquire on the main screen if the timing is switched on. It can set six groups of time in total, and each group of time can be selected through the switch: disable, timing on or


off.

After timing main switch is turned on, it can set the timing on/off, as shown in the picture below:

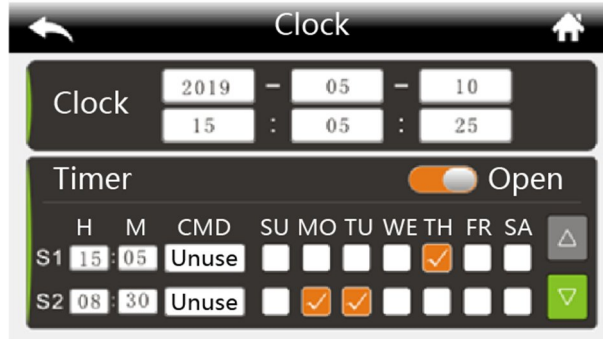

Picture 4-8: Set Timing Switch Screen


If the "Timing Main Switch" is set to "ON", press the < Clock > button in the "Operation" screen to enter the Timing Inquiry and Modification Screen.

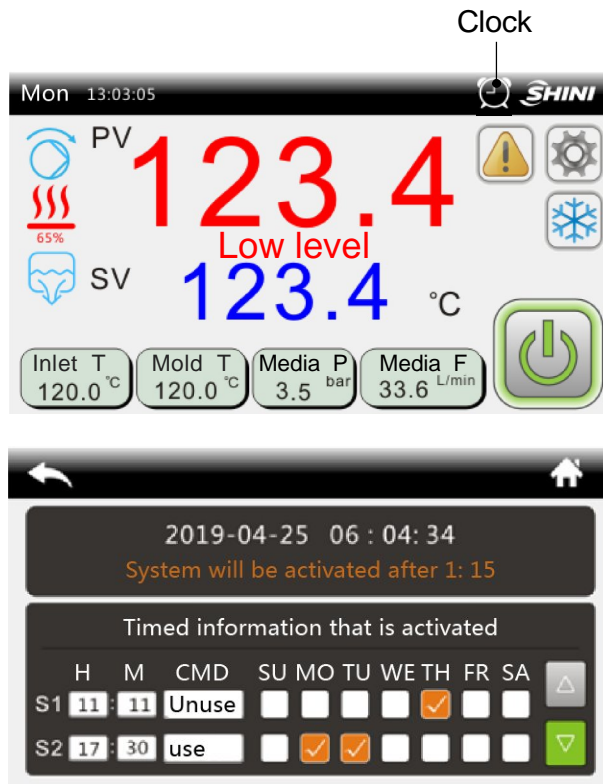

Picture 4-9: Timer Inquiry and Modification Screen

4.3.4 System Setting

In the "User Setting" screen, click the < System Setting > button to enter the picture below:

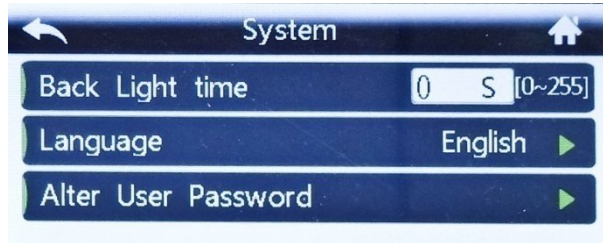

Picture 4-10: System Setting Screen

Set the backlight time: setting range is 0 ~ 255 secs.


Language: Chinese or English

The default user password is 123. See "Password Modification" for details;

4.3.5 Data Download

When downloading data, please use the U disk format: FAT32, and the recommended U disk capacity is 16g or below.

In the user setting screen, click the < Data Download > button to enter the following screen:

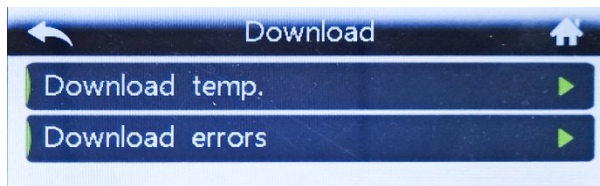

Picture 4-11: Data Download Screen

4.3.5.1 Temp. Data Download



Picture 4-12: Temp. Data Download Screen

Local data backup: copy the temp. data on the display board to the U disk (the data of display board can be saved for up to 48 hrs.). Copy the temperature data stored

on the display board to the USB flash disk. Insert the U disk, wait until the "U disk" displays "connected" status, and then follow the prompts. Other operations are prohibited during the download process.

Real-time data recording: After inserting the U disk and starting the real-time data recording function, then the temp. data will be updated in real time and stored in the U disk automatically, and the recording will be interrupted after unplugging the U disk. Operations on other screens are available during recording.

 **Attention!**

After data export, a folder/SF51XXX will be created in the U disk root directory, and the data will be saved in Excel.

4.3.5.2 Alarm Record Download



Picture 4-13: Alarm Record Download Screen

4.3.6 Advanced Setting

4.3.6.1 Project Setting


In the "User Settings" screen, click the < Advanced Setting > button and enter the password to enter the "Project" screen.



Picture 4-14: Project Screen

In the "Project" screen, click the < Project Parameter > button to enter the project

parameter setting

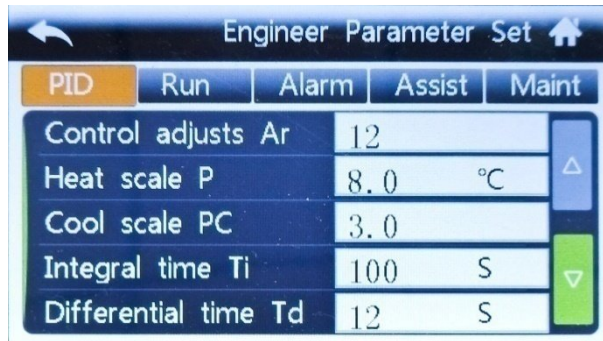

Picture 4-15: Project Parameter Setting Screen

The detailed description of each project parameter is as below Table:

Table 4-4: Project Parameter Description

Running	Probe Specification	K Type	K-type Thermocouple /PT100	/	
	Number of probes	Control loop	control loop~control + return medium ~ control + mould ~control + return medium + mould	/	Control loop: Only has control temp. probe Control+ return mould: control temp. + return medium temp. Control + mould: control temp. + mould temp. Control+mould+mould: control temp. + return medium temp. + mould temp.
	Shutdown temp.	35.0	0~60.0	°C	Shutdown: stop when it cools down to this temp.
		95.0	32.0-140.0	°F	
Reverse run time	60 secs.	0-600 secs.	secs.	Reverse emptying action: After shutdown, start the pump reverse running and valve emptying function; it can start/stop by manual or start/stop 【 reverse time 】 automatically; Note: If the reverse emptying function is started during machine operation, shut down the machine first, and then start the reverse emptying action;	

Fault	3-phase power detection	Use	disable / use	/	Whether it uses the on-board 3-phase power detection;
	Return medium deviation alarm	0.0	0-50.0	°C	<p>(1) Return medium temp. – medium output temp. > 【return medium temp. deviation】 , delay 【temp. deviation alarm delay】 secs., it alarms “Large return medium temp. difference”, make auto reset.</p> <p>0: disable</p> <p>(2) After modifying [SV] or forced cooling, this fault will not be solved in previous temp. rises / drops.</p>
0.0		0-90.0	°F		
Fault	Different mould temp. alarm	0.0	0-50.0	°C	<p>(1) Mould temp.-medium output temp. > 【mould temp. deviation】 , delay 【temp. difference alarm delay】 secs., it alarms “Large mould temp. difference”, make auto reset.</p> <p>0: disable</p> <p>(2) After modifying [SV] or forced cooling, this fault will not be solved in previous temp. rises / drops.</p>
		0.0	0-90.0	°F	
	Different temp. alarm delay	5	0-360	secs.	
	Low temp. deviation alarm	0.0	0-50.0	°C	<p>【SV】 – PV > 【Low temp. deviation alarm】 delay two secs., it alarms low temp., 【SV】 – PV < 【low temp. deviation alarm】 , it will reset the fault automatically.</p> <p>When 【Low temp. deviation alarm】 =0 , this function is disabled.</p>
0.0		0-90.0	°F		
	High temp.	0.0	0-50.0	°C	PV – 【SV】 > 【High temp.

	deviation alarm	0.0	0-90.0	°F	deviation alarm 】 delay two secs., it alarms high temp., , PV - 【SV】 < 【High temp. deviation alarm 】 , it will reset the fault automatically. When 【 High temp. deviation alarm 】 =0 , this function is disabled.
	Low flow alarm	0.0	0-100	L/min	Use flow sensor, the medium flow is lower than the [Low flow alarm], it delays two secs., and alarms "Low flow"; 0: disable
	High pressure alarm	0.0	0-50	bar	Use pressure sensor, the medium pressure is high than the [High pressure alarm], it delays two secs., and alarms "High pressure"; 0: disable
Fault	Heater alarm	0.0	0~999	Min.	1. If the machine fails to reach the set temp. of -5 °C within the [heater alarm] time, it will give the "heater alarm", and continue to control the temp. Manual reset. 2. Set to 0, disable the limit detection.
	Over temp. trip temp. difference	5.0	0~100	°C	PV - 【SV】 > 【overheat trip output temp. difference 】 , open the circuit breaker, the EGO will alarm;
		9.0	0-180	°F	
	Interference alarm	0.0	0~200.0	°C/ sec.	1. Monitor temp. variation trend 2. The temp. rises or drops exceeds the 【 Interference alarm temp. 】 per second, it will give "Interference Alarm", and reset the fault automatically. 3. Set to 0: disable.
0.0		0-360.0	°F/ sec.		
Assist	Control temp. compensation	0.0	-30.0~30.0	°C	Compensate the measurement error of the medium output temp.
		0.0	-54.0~54.0	°F	

	Return medium temp. compensation	0.0	-30.0~30.0	°C	Compensate the measurement error of the return medium temp.
		0.0	-54.0~54.0	°F	
	Return medium temp. compensation	0.0	-30.0~30.0	°C	Compensate the measurement error of the return medium temp.
		0.0	-54.0~54.0	°F	
	Mould temp. compensation	0.0	30.0~30.0	°C	Compensate the measurement error of the mould temp.
		0.0	-54.0~54.0	°F	
Analog quantity AI1 compensation	0.0	-30.0~30.1	bar	Compensate the pressure measurement error	
Analog quantity AI2 compensation	0.0	-30.0~30.2	L/min	Compensate the flow measurement error	
Assist	Comm. address	0	0-31		Communication basic info. setting
	Baud rate	19200.0	4800, 9600, 19200		
	Check bit	No parity	No parity, even parity check, odd parity		
	Stop bit	1bit	1 bit, 2 stop bits		
Maintenance	Unit maintenance time	0.0	0-3000	hr.	When the set accumulative running time is greater than [unit maintenance time], it alarms" Unit Maintenance Fault";
	Accumulative total running time (hr.)	0.0	0-3000	hr.	
	Accumulative total running time (min.)	0.0	0-59	Min.	

In the "Project" screen, click <Password Mgmt.> to enter the password mgmt. settings.



Picture 4-16: Password Mgmt. Screen

- 1) Project password modification
The default value of the project password is 3588. See "Password Modification" for details.
- 2) Clear the user password.
It can clear the user password with one click.

In the "Project" screen, click < Factory Setting >, and enter the password to enter the "Factory Setting" screen.



Picture 4-17: Factory Setting Screen

Important: It's strictly prohibited to change the factory default settings without permission! If necessary, please contact the manufacturer!

4.3.6.2 Data Communication

Interface specification and communication definition:

Use the 9-pin serial port male connector, the pin is defined as pin No.3 foot +, No. 8 foot – comm. protocol:

MODBUS –RTU uses RS485 serial port

Note:


The min. address is 1. If it reads and writes from zero, an error will occur.

Comm. parameters can be set in the "Project Setting" - Project Parameter - "Assist".
Parameter Address Table refer to Appendix 1 and Appendix 2

Comm. parameter address table refer to the Appendix.

4.4 Current Fault Inquiry

When the unit fails, in the "Operation" screen, the < Fault Inquiry > button will flicker.
At this time, click the < Fault Inquiry > button to silence and enter following screen:

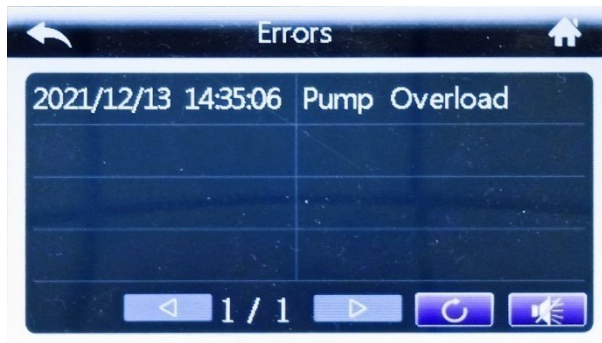

Picture 4-18: Current Fault Screen


Table 4-5: Current Fault Inquiry Screen Icon Key Description

Press Key	Key Name	Description
	Fault reset	After trouble-shooting, press this key to reset the fault.
	Silence	Eliminate the system alarm sound
	Page up	Turn the page to query the fault information, gray key can't be pressed, and green key can be pressed.
	Page down	Turn the page to query the fault information, gray key can't be pressed, and green key can be pressed.

4.5 Inquiry Screen

4.5.1 History Fault Inquiry

When there is no fault currently, click the < Fault Inquiry > button in the "Operation" screen to enter the history fault inquiry.

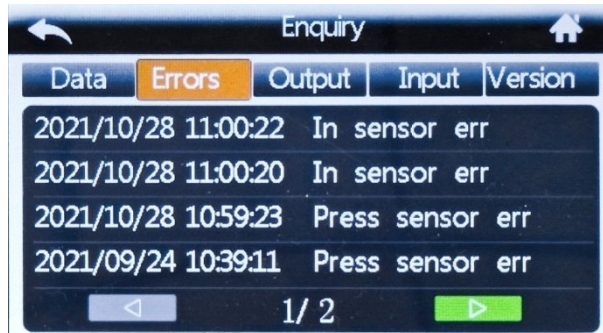

Picture 4-19: History Fault Inquiry Screen


4.5.2 Data Inquiry

It can check all probes' temperature, pressure of current system, and query the system running time and other data:



Picture 4-20: Data Inquiry Screen

4.5.3 Output Inquiry

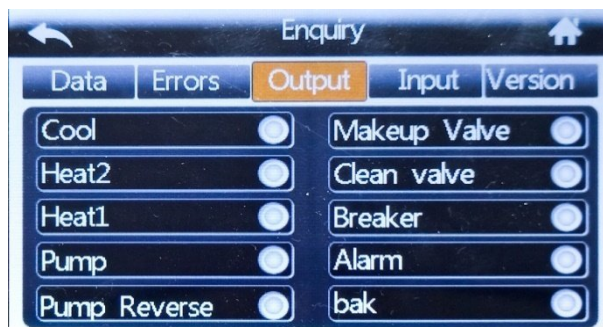


Picture 4-21: Output Inquiry Screen

When the indicator is gray, it means that corresponding relay has no output.

When the indicator light is green, it indicates that corresponding relay is outputting.

4.5.4 Input Inquiry

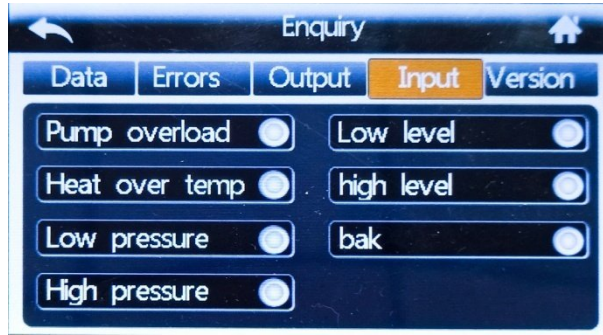


Picture 4-22: Input Inquiry Screen

When the indicator light is gray, it indicates that corresponding switch input is invalid.

When the indicator light is green, it indicates that corresponding switch input is valid.

4.5.5 Version Inquiry

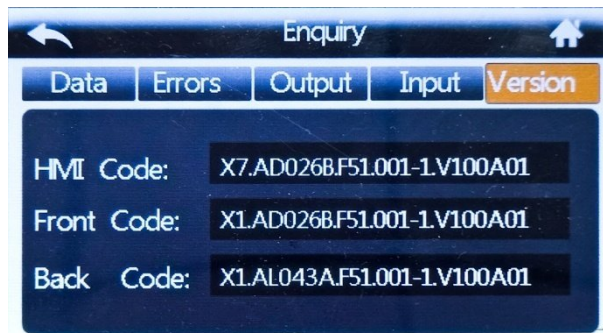

Picture 4-23: Version Inquiry Screen

Take real display value as standard.

4.6 Password Management

4.6.1 Login

Two groups of user names and passwords, as shown in the Table below:

Table 4-6: User and Password Function


User Name	Password (can be modified)	Function
User	123	Enter 【User Setting】 screen
Project	3588	Enter 【Project Setting】 【User Setting】 screen

4.6.2 Password Modification

In the "User Setting" screen, click < System Setting >, and then click < Modify User Password >, it can modify the user password; In the "Project" screen, click <

Password Mgmt. >, and then click < Modify Project Password >, it can modify the project's password;The modifying steps of the two groups of passwords are the same. Take "User" password modification as an example, as follows:

Enter "User Setting" screen, click <System Setting>, and then click < Modify User Password > to enter the screen below:

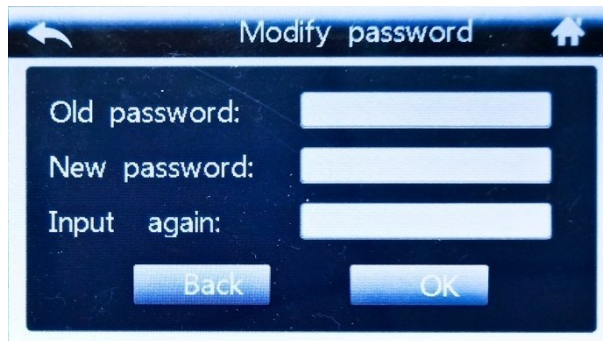

Picture 4-24: Modifying User Password Screen

- 1) Enter the old password. If the password is wrong, the password input box displays "Password Error". Press the input box to clear and re-enter the old password.
- 2) Input the new password;
- 3) Input the new password again;
- 4) Confirm

If the passwords of twice inputs are different, it will pop up the prompt box of "different passwords", it indicates the password modification is not success.

If the modified password is successful, it will pop up the prompt box of "Password Modified Successfully! Please be noted to save the new password! ".

4.6.3 Factory Setting


In the "Project" screen, click < Factory Setting >, and enter the password to enter the "Factory Setting" screen.



Picture 4-25: Factory Setting Screen

4.6.3.1 Manufacturer Parameter Settings


Set manufacturer parameters. For detailed instructions on each parameter, please refer to the Manufacturer Parameter Table.

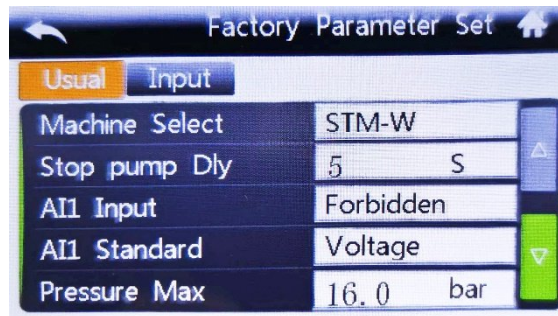

Picture 4-26: Manufacturer Parameter Settings

4.6.3.2 Parameter Initialization


User parameters, project parameters and manufacturer parameters can be initialized without initializing passwords.

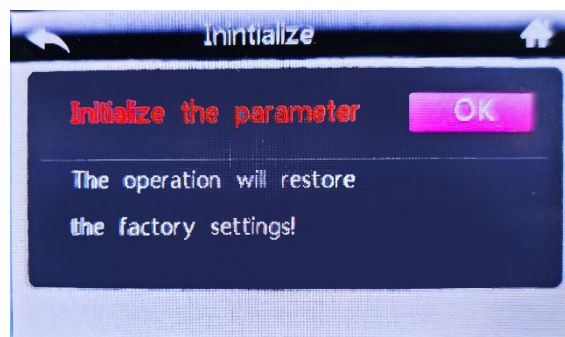

Picture 4-27: Parameter Initialization Screen

4.6.3.3 Fault Clearing

Clear all historical faults.

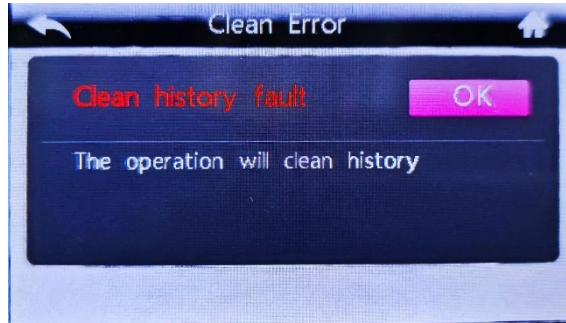



Picture 4-28: Fault Clearing Screen



4.6.3.4 Manufacturer Debugging

User can enter this operation under non-operational status, and debug relay output




Picture 4-29: Manufacturer Debugging Screen

When the button  is grey, press  to start relay output.

When the button  is green, press  to close the relay.

4.6.3.5 Password Mgmt.

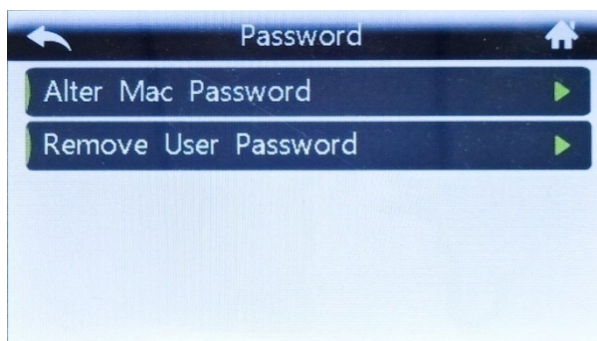

Picture 4-30: Password Mgmt. Screen

- 1) Project password modification

The default value of the project password is 3588. See "Password Modification" for details.

- 2) Clear the user password.

It can clear the user password with one click.

Table 4-7: Default Parameters and Meanings

	Parameter Name	Initial Value	Setting Range	Unit	Remarks
Equipment	Pump stop delay	5s	3-60s	secs.	The reverse or forward rotation can only be started after the pump stop delay [pump stop delay]: no high-temp. water
	AI1 input definition	Disabled	Disabled/ media pressure	/	
	AI1 input specification	Current	Current, voltage		Manually adjust the SW3 thin code switch on the control board, and select the correct analog signal input.
	Upper limit of pressure measurement	16.0	0.0~99.9	bar	
	Lower limit of pressure measurement	0.0	0.0~99.9	bar	
	AI2 input definition	Disabled	Disabled / Media flow rate		
	AI2 input specification	Current	Current, voltage		Manually adjust the SW2 thin code switch on the control board, and select the correct analog signal input.
	Upper limit of flow measurement	200.0	0~999.9	L/min	
	Lower limit of flow measurement	0.0	0~999.9	L/min	
	Set temp. upper limit	180.0	0~180.0	℃	
		194.0	32.0-356.0	°F	
	Set temp. lower limit	0.0	0~180.0	℃	
		32.0	32.0-356.0	°F	
	Power failure recovery function	Disabled	Disabled / enabled		Whether to start power failure recovery function
	AI1 voltage input upper limit	4.5	0.2-10.0	V	【 AI1 input spe. 】 selects "voltage" display

	AI1 voltage input lower limit	0.5	0.2-10.0	V	【 AI1 input spe. 】 selects “voltage” display
	AI2 voltage input upper limit	4.5	0.2-10.0	V	【 AI2 input spe. 】 selects “voltage” display
	AI2 voltage input lower limit	0.5	0.2-10.0	V	【 AI2 input spe. 】 selects “voltage” display
	AI1 current input upper limit	20.0	2.0-20.0	mA	AI1 input spe.】 selects “current” display
	AI1 current input lower limit	4.0	2.0-20.0	mA	AI1 input spe.】 selects “current” display
	AI2 current input upper limit	20.0	2.0-20.0	mA	【 AI12 input spe. 】 selects “current” display
	AI2 current input lower limit	4.0	2.0-20.0	mA	【 AI12 input spe. 】 selects “current” display
Equip ment	Lower limit of low temp. pressure release	6.0	1.0~10.0	bar	When PV<[upper limit of low temp. range] °C, if the outlet pressure>[lower limit of low temp. release pressure], start the exhaust valve to release the pressure. Otherwise, release the pressure according to temperature and pressure corresponding relation, and maintain the pressure within specified range.
	Low temp. range upper limit	140.0	1.0~200.0	°C	
		284.0	33.8~392.0	°F	
Input	Pump overload	normal open	normal open ~ normal close	~ /	
	EGO overheat	normal open	normal open ~ normal close	~ /	
	Low pressure	normal open	normal open ~ normal close	~ /	
	High pressure	normal open	normal open ~ normal close	~ /	
	Low liquid level	normal open	normal open ~ normal close	~ /	
	High liquid level	normal open	normal open ~ normal close	~ /	

4.7 Controller Exception List

No.	Fault Name	Detection Logic	Machine Action after Alarm	Reset Mode
1	3-phase power phase reverse / phase loss	<p>1. When alarm occurs, the machine stops running. After troubleshooting, reset manually.</p> <p>2. When powered on, it starts detection, the phase reverse alarm delays 1.2m secs., and the phase shortage alarm delays 3 secs. If it needs to disable the on-board phase sequence detection, please set the project parameter [3-phase power detection] to "disabled".</p>	Stop temp. control	Manual reset
2	Pump overload	<p>1. Power-on detection</p> <p>2. Pump overload input point is valid, and the alarm delays 2 secs. Stop and release.</p>	Stop temp. control	Manual reset
3	Heater overheat	<p>1. Power-on detection</p> <p>2. Alarm action:</p> <p>1) EGO input point is valid, the alarm delays 2 secs., and open the circuit breaker output point.</p> <p>2) $PV - \text{【SV】} > \text{【overheat release output temp.】}$, open the circuit breaker, it alarms EGO overheat. The temp. must reach the set temp. once that can be valid. Control without processing when the temperature is set from high to low.</p> <p>Note: It alarms when one of the conditions is met.</p>	Stop temp. control	Manual reset

4	Low pressure	<p>1. After system powered on, it starts to detect the inlet water pressure.</p> <p>2. Low pressure input point is valid, and the alarm delays 2 secs.</p>	Stop temp. control	Manual reset
5	Too high pressure	<p>1. When the high-pressure switch receives the high-pressure signal, the air exhaust valve will open according to the set time. If the [high pressure alarm time] is still in high pressure status, it will give the high pressurer alarm.</p> <p>2. Pressure sensor detection Use the pressure sensor, if the medium pressure is higher than the 【High pressure alarm】 during the operation, it delays 2 secs. and alarms for “ too high pressure”. Set the 【High pressure alarm】 to 0, disable this function.</p>	Stop temp. control	Auto Reset
6	Low liquid level	<p>Press the start button to start detection</p> <p>Detection method:</p> <p>Start-up stage: If the liquid level is at low level after the refilling delay time (adjustable, range 0-300s, preset 90s), it will give low liquid level alarm, shut down and release.</p> <p>Temp. control stage: During the heating process, if the high water level signal fails, the refilling exceeds the 【water refilling alarm time】 , it will give the "low liquid level" alarm and shutdown.</p>	Maintenance status	Auto Reset

7	Low liquid level	<p>Press the start button to start detection</p> <p>Detection method:</p> <p>Start-up stage: If the liquid level is at low level after the refilling delay time (adjustable, range 0-300s, preset 90s), it will give low liquid level alarm, shut down and release.</p> <p>Temp. control stage: If it detects no signal input of the low liquid level, the alarm will delay 2 secs, and it will shut down and release.</p>	Stop temp. control	Manual reset
8	Abnormal control probe	Probe fault	Stop temp. control	Manual reset
9	Abnormal return medium probe	Probe fault	Stop temp. control	Manual reset
10	Abnormal mould probe	Probe fault	Stop temp. control	Manual reset
11	Pressure sensor fault	<ol style="list-style-type: none"> 1. Check whether the sensor input signal is normal. 2. AI 1 input is defined as "disabled", disable the fault. 	Maintenance status	Manual reset
12	Flow sensor fault	<ol style="list-style-type: none"> 1. Check whether the sensor input signal is normal. 2. AI2 input is defined as "disabled", disable the fault. 	Maintenance status	Manual reset

13	Temp. differences between the return medium are too big.	<p>1. When it gives alarm, the machine run normally. After trouble-shooting, it will reset automatically.</p> <p>2. Detection during the unit running status:</p> <p>(1) When the Control temp. – return medium temp. > 【Return medium temp. deviation】 , and it delays the 【Temp. difference alarm delay】 seconds, the system will give alarm for large return medium temp. difference. When the 【Return medium temp.difference alarm】 = 0, disable this function.</p> <p>(2) It will process only after the temp. exceeds the set value and runs a temp. vibration cycle. After it modifies the [SV] or forced cooling, this trouble will not be solved.</p>	Maintenance status	Auto reset
14	Temp. differences between the mould are too big.	<p>1. When it gives alarm, the machine run normally. After trouble-shooting, it will reset automatically.</p> <p>2. Detection during the unit running status:(1)</p> <p>When the Control temp. – mould temp. > 【Mould temp. deviation】 , and it delays the 【Temp. difference alarm delay】seconds, the system will give alarm for large mould temp. difference. When the 【 Mould temp. difference】 = 0, disable this function.</p> <p>(2) It will process only after the temp. exceeds the set value and runs a temp. vibration cycle. After it modifies the [SV] or forced cooling, this trouble will not be solved.</p>	Maintenance status	Auto reset

15	Too low temp.	<p>【SV】 - PV > 【Low temp. deviation alarm】, it delays 2 secs., and gives low temp. alarm.</p> <p>【SV】 - PV > 【Low temp. deviation alarm】, it resets the fault automatically.</p> <p>When the 【Low temp. deviation alarm】 = 0, disable this function.</p> <p>Notes: The temp. must reach the set temp. once that can be valid. Control without processing when the temperature is set from high to low.</p>	Maintenance status	Manual reset
16	Too high temp.	<p>PV - 【SV】 > 【High temp. deviation alarm】, it delays 2 secs., and gives high temp. alarm.</p> <p>PV - 【SV】 > 【High temp. deviation alarm】, it resets the fault automatically.</p> <p>When the 【High temp. deviation alarm】 = 0, disable this function.</p> <p>Notes: The temp. must reach the set temp. once that can be valid. Control without processing when the temperature is set from high to low.</p>	Maintenance status	Manual reset
17	Too low flow	<p>1. Machine shutdown when it alarms. After the flow becomes normal, reset manually.</p> <p>2. Use flow sensor. When it running, the medium flow is lower than the 【Low flow alarm】, it delays 2 secs. and alarms "low flow".</p> <p>When the 【Low flow alarm】 = 0, disable this fault.</p>	Stop temp. control	Manual reset

18	Too high pressure	<p>1. Machine shutdown when it alarms, and reset manually.</p> <p>2. Use flow sensor. When it running, the medium flow is lower than the 【High pressure alarm】 , it delays 2 secs. and alarms “high pressure”.</p> <p>When the 【High pressure alarm】 = 0, disable this fault.</p>	Stop temp. control	Manual reset
19	Interference Alarm	<p>1. In the temp. control stage, the temp. drops or rises beyond the [Interference alarm] temp. within 1s.</p> <p>2. When the 【Interference alarm】 = 0, disable this fault.</p>	Maintenance status	Manual reset
20	Heater alarm	<p>1. In the temp. control stage, when the control temp. can't reach the set temp. of - 5 °C within the 【Heater alarm】 time, it alarms. When it reaches the set temp., it will dismiss the alarm automatically.</p> <p>2. When the 【Heater alarm】 = 0, disable this fault.</p>	Maintenance status	Auto reset
21	Unit needs maintenance	Power on detection: Once this fault occurs, the unit can't start. Enter the project parameter to set the [Unit maintenance time] to 0, and eliminate this fault.	Stop temp. control	Manual reset
22	Overtime when communicating with the rear plate	The comm. wire between the display panel and the control board breaks	Maintenance status	Auto reset
23	Rear plate data error	Parameter data verification error	Stop temp. control	Please contact the manufacturer.


5. Trouble-shooting

Failures	Possible reasons	Solutions
LCD displays nothing after switch on power and press ON/OFF POWER key.	Did not connect through power supply. Main switch broken. Power supply wires problems. Control circuit fuse melt. Transformer broken.	Connect through power supply. Replace main switch. Check electrical wires. Fix the fuse. Replace the transformer.
Phase alarm	Power supply low voltage. Phase shortage. Phase reversal. PCB problems.	Check power supply. Check power supply. Exchange two of the wires of power supply. Replace the PCB.
Pump overload	Abnormal fluctuations of power supply. Pump blocked. Pump motor problems. Error setting current of thermo relay (F1).	Check power supply. Check the pump. Check the pump motor. Correctly set the setting current of thermo relay (F1) 1.1 times as motor rated current. Please refer to Main Components for detailed description of thermo relay. Reset overload relay: Wait for one minute, and then press the blue button to reset.
EGO overheat	EGO temperature setting mistakes. EGO poor temperature detecting. Heater contactor K1 and K2 problems.	Correctly set the EGO temp. (EGO temp. setting value= temp. setting value+10℃). Replace the EGO. Replace the contactor.
Low liquid level.	Oil tank shortage. Poor liquid level switch.	Check the water tank and whether the pipeline has heat transfer oil leaked and refill it. Replace the level switch.
Insufficient pressure	Insufficient pressure of the external water supply. Poor pressure switch.	Increase the pressure of external water supply. Replace the pressure switch.
High pressure	The mold circulating water ball valve doesn't open or the pipe is blocked. Poor pressure switch.	Check the ball valve and pipeline. Replace the pressure switch.
Temp. window displays "----"	Abnormal sensor.	Check the sensor.
Once running, pump output indicator lightens but pump cannot start. After a	PCB output relay problems. Electrical circuit problems.	Check or replace the PCB. Check electrical circuit.

while pump still fails to run.		
Differences between setting temperature and actual temperature are too big.	Too short time after machine startup. Temperature parameter setting error. Cooling solenoid valve problems.	Wait for a while. Check temperature parameters. Please refer to the standard manual of setting parameters. Replace solenoid valve.
Temperature can't rise up.	Heater contactor problems. Heater problems. Thermocouple problems. PCB output point problems.	Replace the contactor. Replace pipe heater. Replace thermocouple. Check and repair PCB.
Circuit breaker tripping off at turning on main switch.	Short circuit of main circuit. Transformer short circuit or connected with earth wire. Problems of circuit breaker.	Check electrical wire. Replace circuit breaker.
Circuit breaker tripping off at turning on pump switch.	Pump motor coil short circuit. Problems of circuit breaker.	Check the pump motor. Replace the circuit breaker.
Circuit breaker tripping off after short heater output.	Heater tube short circuit or shell contact. Problems of circuit breaker.	Replace heater tube. Replace circuit breaker.
Three phase reverse phase / phase loss	Main power wire reversely connected,	Replace the two main power wires.
Heater overheat	Solid state relay break down, circuit board failure, electric, pipe heater broken.	Check whether the solid-state relay, circuit board and pipe heaters are damaged. Check whether the solenoid valve is blocked.
Low pressure	The water refilling pressure in the plant is insufficient, water inlet blocked, and the plunger pump may run abnormally.	Check whether the valve at the water refilling port is open. Check whether the system inflator run normally.
High pressure	The pipe may be blocked, and the circuit board may run abnormally.	Check whether the solenoid valve runs normally. Check whether the pressure release function of the circuit board works normally.
Low liquid level	Check whether the refilling pressure is sufficient.	Check the water refilling pressure is enough.
Abnormal control probe	Probe fault	Replace the probe.
Abnormal return media probe	Probe fault	Replace the probe.
Abnormal mould probe	Probe fault	Replace the probe.
Pressure sensor fault	Pressure sensor fault	Replace the sensor.

Differences between the return medium temp. is too big.	There maybe problems in the pipes between the water heater and mould.	Check the pipe.
Differences between the mould temp. is too big.	There maybe problems in the pipes between the water heater and mould.	Check the pipe.
Too low temp.	Solid state relay break down, circuit board failure, electric, pipe heater broken.	Check whether the solid-state relay and solenoid valve circuit board operate normally.
High temp.	Solid state relay break down, circuit board failure, electric, pipe heater broken.	Check whether the solid-state relay and solenoid valve circuit board operate normally.
Too low flow	The water heater pipes may block.	Check whether the water heater pipe has blocked. Check whether the water flow distributor pipeline is connected properly.
High pressure	The water heater pipes may block, and the solenoid valve may run abnormally.	Check whether the water heater pipe is blocked, and the solenoid valve runs normally.
Interference alarm	The water heater pipes may block, and the solenoid valve may run abnormally.	Check whether the water heater pipe is blocked, and and the solenoid valve runs normally.
Heater alarm	Solid state relay break down, circuit board failure, electric, pipe heater broken.	Check whether the circuit breaker trips. Check whether the solid state relay is broken. Check whether the solenoid valve is broken, so it keeps cooling all the time.
Unit needs maintenance.	When the setting time is up, it reminds to maintain the machine.	Detect after powering on, once it shuts down, the unit can't start. Enter the project parameter to set [Unit Maintenance Time] to 0 to shoot the trouble.
Over time when connecting the rear plate.	The comm. line between the display board and the control board is disconnected	Please contact the manufacturer.
Rear plate data error	Parameter data verification error	Please contact the manufacturer.

6. Maintenance and Repair

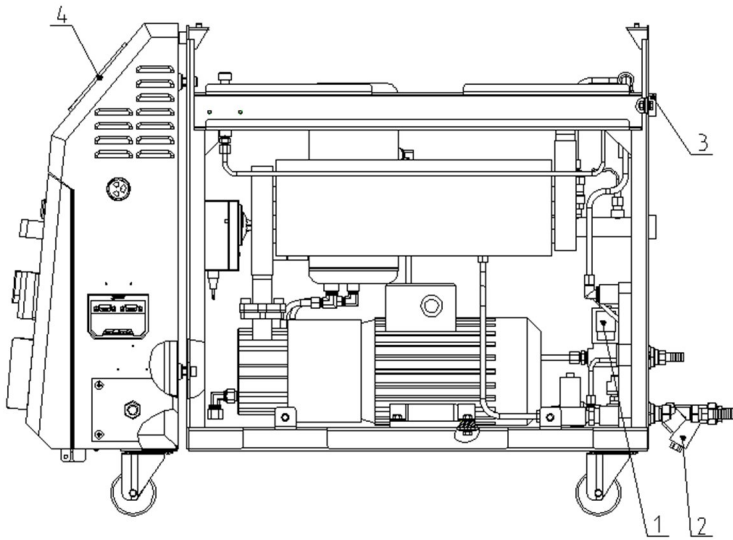

1. Clean the solenoid valve.
Period: Every three months.
2. Clean the Y-type filter valve.
Period: monthly.
3. Clean the pipe heater.
Period: Every three months.
4. Check the contactor.
Period: Every three months.


Pay attention to the following rules during maintenance:

- 1) It requires two personnel to check the machine. Firstly, reduce the temperature, cut off the power supply, and drain the oil and water; Make sure to operate after inspection with enough maintenance space.
- 2) When operating, it's dangerous to touch the machine as it is in high temperature state. The operator must stop the machine before checking and maintenance and wear safety gloves before operation.
- 3) In order to extend the life of the system and prevent accidents, periodic inspections must be carried out.
- 4) Please reduce the temperature to room temperature (below 50°C), cut off power supply and drain oil and water first while inspecting the machine;

Please note that it is dangerous to check or tear down the machine during operation.

6.1 Open the Covers

- 1) Open the top covers of the unit (Lift up it as shown picture).

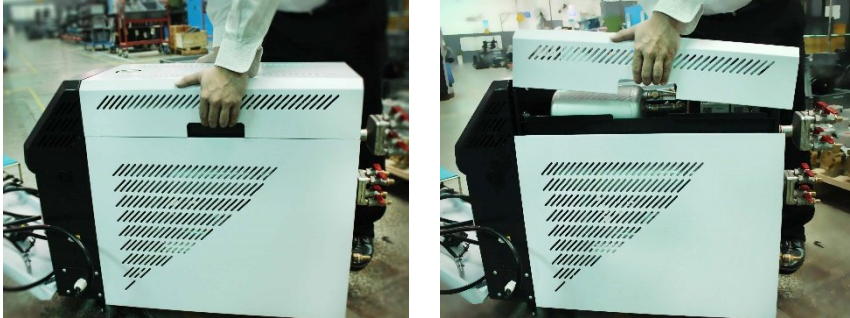

Picture 6-1: Open the Covers 1

- 2) Take down the side covers (Pull up it outward as shown picture).



Picture 6-2: Open the Covers 2

- 3) Open the cover of control box. Screw off two butterfly screws to unlock the cover. (Refer to the pictures below)



Picture 6-3: Open the Covers 3

6.2 Y Type Strainer

- 1) Clean soft water should be used as cooling water. Filter screen is used in the strainer to stop impurities and pollutants to enter into water pipe.
- 2) Impurities or pollutants may cause errors and bad temperature control. Clean filter screen of the strainer periodically.
- 3) Cleaning steps: turn off power and cooling water supply. Open the top cover of filter screen to clean the filter.




Picture 6-4: Y Type Strainer

6.3 Solenoid Valve

Replace solenoid valve:

- 1) Open machine top cover.
- 2) Take down right side cover.
- 3) Unfix the solenoid valve for replacement.
- 4) Install the covers in a reverse order.

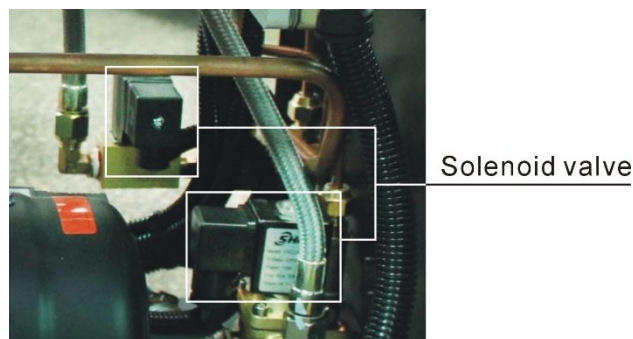

Picture 6-5: Solenoid Valve


6.4 Pipe Heater

The pipeline will be blocked when the pipe heater has been used for over six months or it is suffered low heating efficiency, and then it's suggested to clean the interval pipe heater. It can use our Tube Cleaning Machine STCM to clean the

heating pipe, and our tube cleaning machine has standard industrial cleaning agent: JP72821200100 industrial cleaning agent ZJ-821-25L/barrel. The cleaning time of common mould temperature controller: 1~2 hours (The cleaning time is not a fixed time, and can be set on demand). The cleaning steps are as follow:

- 1) Connect the machines to be cleaned as per their quantity with the mould inlets /outlets of the tube cleaning machine in series (as shown in the figure below);
- 2) Add a certain proportion of industrial cleaning agent into the refilling water of the water tank, and then convey some agent water into the mould pipeline through the power driven pump to complete the water cycle of repeated water suction and discharge; ,
- 3) Through the large flow washing and chemical reaction with the liquid agent, it can clean the hard saline alkali scale, rust and other substances in the mould pipeline as to unblock the pipeline, thus improving the energy efficiency.

After cleaning, the waste water in the water tank pipeline can be neutralized by the regulator: YP72180200100 PH regulator (alkaline) ZJ-180-25L/ barrel (option).

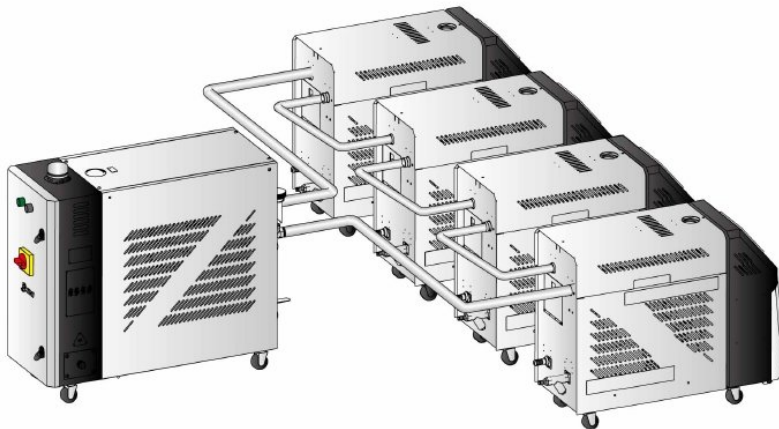

Picture 6-6: Pipe Heater Cleaning

6.5 Maintenance Schedule

6.5.1 About the Machine

Model _____ SN _____ Manufacture date _____

Voltage _____ Φ _____ V Frequency _____ Hz Power _____ kW

6.5.2 Installation & Inspection

- Check the installation space is enough as required.
- Check the pipes are correctly connected.

Electrical installation

- Voltage: _____ V _____ Hz
- Fuse melting current: 1 Phase _____ A 3 Phase _____ A
- Check phase sequence of power supply.

6.5.3 Daily Checking

- Check machine startup function.
- Check all the electrical wires.

6.5.4 Weekly Checking

- Check loose electrical connections.
- Check and clean Y type filter ¹.
- Check solenoid valve.
- Check motor overload and phase reversal alarm function.
- Check whether pipeline joints are under looseness.
- Check the sensitivity of EGO.

6.5.5 Trimonthly Checking

- Check level switch.
- Check the contactor ².
- Replace the hot kerosene with a using temperature above 160 degree ³.

6.5.6 Half-yearly Checking

- Check damaged pipes.
- Clean process heater/cooler.

- Check indicator and buzzer.
- Replace the hot kerosene with a using temperature above 120~160 degree ⁴.

6.5.7 Yearly Checking

- Replace the hot kerosene with a using temperature above 120 degree ⁵.

6.5.8 3 year Checking

- PC board renewal.
- No fuse breaker renewal.

- Note: 1. Y-type filter has the function of filling water cooling protection effect, be sure the waterway are clear to avoid cooling failure.
2. Manufacturer laboratory data for AC contactor is two million times in life. we suggest service life for one million four hundred thousand times, if work eight hours per day, recommended replacing frequency is 1.5 years, if work day and night, replacement is suggested to be done every six months.
 3. Hot kerosene coke will influence the detection accuracy of internal temperature probe and the efficiency of heat elements, three months replacing frequency is suggested.
 4. Hot kerosene coke will influence the detection accuracy of internal temperature probe and the efficiency of heat elements, six months replacing frequency is suggested.
 5. Hot kerosene coke will influence the detection accuracy of internal temperature probe and the efficiency of heat elements, and suggested replacing frequency is one year.

Appendix:

STM Comm. Variable Table (1)

STM Comm. Variables					Comm. Protocol: MODBUS-RTU
D-Map (4000 0+i)	English	Chinese	Range	Description	Type
1	CONTROL PV.	Control temp.	-50 ~ 500	※1 (Different displays depending on whether the temp. unit ° C has a decimal point.)	read only
2	RET PV	Return water temp.	-50 ~ 500		read only
3	ENT PV	Output water temp.	-50 ~ 500		read only
4	SV	Control target value	-50 ~ 500		read only
5	RTC YEAR	Current year	0 ~ 99	2000(0), 2001(1), ..., 2099(99)	read only
6	RTC MONTH	Current month	1 ~ 12		read only
7	RTC DATE	Current date	1 ~ 31		read only
8	RTC DAY	Current week	0 ~ 6	Sun.(0), Mon. (1), Tues.(2), ..., Sat.(6)	read only
9	RTC HOUR	Current hour	0 ~ 23		read only
10	RTC MINUTE	Current minute	0 ~ 59		read only
11	RTC SECOND	Current secs.	0 ~ 59		read only
12	CONTROL STATUS	Control status	0 ~ 3	Fault(0), stop control(1), In controlling(2), Auto-tuning(3)	read only
13	MMI STATUS	Running status	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
14	DO STATUS	Contact output status	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only

15	DI STATUS	Contact input status	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
16	ALARM STATUS	Alarm status	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
17	CONTROL PV ERROR	Control temp. input alarm	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
18	RET PV ERROR	Return water temp. input alarm	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
19	ENT PV ERROR	Water outlet temp. input alarm	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
20	REMOTE ERROR	Remote control input alarm	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
21	KEY STATUS	KEY key status	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
22	LED STATUS	LED indicator status	0 ~ 255	※2 (Operate it with bit address)(as shown in Appendix 3)	read only
30		Switching value status	-	※3 As shown in Appendix 4	read only
31		Relay status	-	※3 As shown in Appendix 4	read only
32		Fault info. 1	-	※3 As shown in Appendix 4	read only
33		Fault info. 2	-	※3 As shown in Appendix 4	read only
100	HOUT	Heating end output	0 ~ 100%		read only
101	COUT	Cooling end output	0 ~ 100%		read only

102		Backlight time	0 ~ 255	0 ~255	read /write
104	RUN/RESET KEY	RUN/RESET KEY	0, 1	<p>1 = Key (button) operation. After this operation, it will be automatically reset to 0.</p>	write only
105	AUTO-TUNING KEY	AUTO-TUNING KEY	0, 1		write only
106	AUTO-START KEY	AUTO-START KEY	0, 1		write only
107	SUCTION KEY	SUCTION KEY	0, 1		write only
108	COOLING KEY	COOLING KEY	0, 1		write only
109	BUZZER OFF KEY	BUZZER OFF KEY	0, 1		write only
110	SUCTION OFF KEY	SUCTION OFF KEY	0, 1		write only
111	F KEY	F KEY	0, 1		write only
112		Reset	1		write only
120		Flow value			Unit: 0.1L/min
125		Pressure value		Unit:0.1bar	read only
150		Emptying temp.	0-120.0°C	When the PV temp. is less than [Emptying temp.], the reverse emptying can be started.	read /write
151		Emptying time	60 secs.	0-600 secs.	read /write

Appendix 2: STM Comm. Variable Table (2)

D-Map (40000+i)	English	Chinese	Range	Description	Type
200	SV	Control target value (°C)	-50 ~ 500°C	※1 (Different displays depending on whether the temp. unit °C has a decimal point.)	read /write
201	PB	Heating control belt	0 ~ 550°C	※1 (Different displays depending on whether	read /write

				the temp. unit ° C has a decimal point.)	
202	TI	Integral time	1 ~ 3600s		read /write
203	TD	Differential time	1 ~ 3600s		read /write
204	PBC	Cooling control zone	0 ~ 550°C	※1 (Different displays depending on whether the temp. unit ° C has a decimal point.)	read /write
205	CT	Heating control cycle	1 ~ 100s		read /write
206	CTC	Cooling control cycle	1 ~ 100s		read /write
300	PHASE ALARM	Phase detection	0, 1	Unuse (0), use(1)	read /write
301	DEV1 ALARM	Output water temp. deviation	0 ~ 550°C	※1 (Different displays depending on whether the temp. unit ° C has a decimal point.)	read /write
302	DEV2 ALARM	Return water temp. deviation	0 ~ 550°C		read /write
303	TURB ALARM	Interference alarm	0 ~ 550°C		read /write
304	HEATER ALARM	Heater alarm	0 ~ 3600s		read /write
401	SUB HEATING	Auxiliary output	0 ~ 550°C	※1 (Different displays depending on whether the temp. unit ° C has a decimal point.)	read /write
402	COOLING TEMP	Cooling temp.	-50 ~ 500°C		read /write
500	H.LIMIT TEMP	Upper limit temp.	-50 ~ 500°C	※1 (Different displays depending on whether	read /write

				the temp. unit ° C has a decimal point.)	
501	L.LIMIT TEMP	Lower limit temp.	-50 ~ 500°C		read /write
502	TEMP UNIT	Temp. unit	0, 1	°C(0), °F(1)	read /write
503	TEMP DEGREE	Decimal point	0, 1	0.1(0), 1(1)	read /write
504	CTL TEMP BIAS	Control temp. correction	-550 ~ 550°C	※1 (Different displays depending on whether the temp. unit ° C has a decimal point.)	read /write
505	RET TEMP BIAS	Return water temp. correction	-550 ~ 550°C		read /write
506	ENT TEMP BIAS	Output water temp. correction	-550 ~ 550°C		read /write
600	NOW YEAR	Year setting	0 ~ 99	2000(0), 2001(1), ..., 2099(99)	read /write
601	NOW MONTH	Month setting	1 ~ 12		read /write
602	NOW DATE	Date setting	1 ~ 31		read /write
603	NOW DAY	Week setting	0 ~ 6	Sun.(0), Mon. (1), Tues.(2), ..., Sat.(6)	read /write
604	NOW HOUR	Hour setting	0 ~ 23		read /write
605	NOW MINUTE	Minute setting	0 ~ 59		read /write
606	SCHDULE DAY	Week reserve setting	0 ~ 127	Sun.(0), Mon. (1), Tues.(2), ..., Sat.(6)	read /write
607	AUTO- START HOUR	Reserve auto start hr. setting	0 ~ 24	Unuse (00:00)	read /write
608	AUTO- START	Reserve auto start min. setting	0 ~ 59		read /write

	MINUTE				
609	AUTO-END HOUR	Reserve auto shutdown hr. setting	0 ~ 24	Unuse (00:00)	read /write
610	AUTO-END MINUTE	Reserve auto shutdown min. setting	0 ~ 59		read /write
611	AS SETTING TIME	Check time setting	0 ~ 9999	Unuse (00:00)	read /write
612	RUNNING TIME	Device using time	0 ~ 9999		read only
D-Map (40000 +i)	English	Chinese	range	Description	Type
700	LANGUAGE	Language setting	0, 1	Chinese(0), English(1)	read /write
702	PASSWORD	Password setting	0 ~ 9999		read /write
703	RET/ENT DISP	Return water output temp.	0, 1	Unuse (0), use(1)	read /write
704	W-FILL TM T1	Water refilling time T1	0 ~ 600s		read /write
705	W-FILL TM T2	Water refilling time T2	0 ~ 60s		read /write
706	RET/ENT DISP	Return loop display settings	0, 1, 2, 3	Display control loop, control+ return medium, control + mould, control+ return medium + mould	read /write

Appendix 3: Bit Address Variable (1)

D-Map (4000 0+i.j)	Name	Bit							
		0	1	2	3	4	5	6	7
13	MMI STATUS	Control	Cooling	Auto- tuning	Suction	Reserv e	Buzzer Off	-	Input power
14	DO STATUS	Pump forward action	Pump forward action	Water refilling	Suction	Alarm	Breaker	Air	-
15	DI STATUS	Pump overloa d	EGO	Low pressur e	High pressure	Low liquid Level	High liquid Level	-	start control
16	ALARM STATUS	Phase alarm	Temp. alarm	Deviati on alarm	Interferen ce alarm	Heating alarm	-	-	-
17	CONTR OL PV ERRO R	-	-Over	+Over	Sensor Open	AD Error	-	-	-
18	RET PV ERRO R	-	-Over	+Over	Sensor Open	AD Error	-	-	-
19	ENT PV ERRO R	-	-Over	+Over	Sensor Open	AD Error	-	-	-
20	REMO TE ERRO R	-	-Over	+Over	Input Open	AD Error	-	-	-
21	KEY	RUN	AUTO-	AUTO-	SUCTION	COOLI	SUCTI	BUZZ	power

	STATUS		TUNING	START	OFF	NG	ON	ERROR	
22	LED STATUS (KEY LED)	RUN	AUTO-TUNING	SUCTION	COOLING	BUZZER OFF	AUTO-START	SUCTION OFF	F
	LED STATUS	Power	Heater output	Auxiliary heating output	Cooling output	Pump forward action	Pump reverse action	Water refilling	Alarm