

SG-24N

Screenless Granulators

Date: Oct., 2021

Version: Ver.E (English)



Contents

1. General Description	7
1.1 Coding Principle.....	8
1.2 Feature	8
1.3 Safety Regulations.....	10
1.3.1 Safety Signs and Labels.....	10
1.3.2 Transportation and Storage of the Machine	11
1.4 Exemption Clause.....	13
2. Structural Features and Working Principle.....	14
2.1 General Description	14
2.1.1 Working Principle.....	14
2.2 Safety System.....	15
2.2.1 Emergency Stop Switch	15
2.2.2 Safety Switch.....	15
2.2.3 Gate Lock.....	16
2.3 Electrical Components Description	17
2.3.1 Thermal Overload Relay.....	17
2.4 Options	18
2.4.1 30-second Instant Recycling System.....	18
2.4.2 Regrind Conveying via Blower & Cyclone (BC Type).....	18
2.4.3 Dust Separator (DS Type).....	19
2.4.4 Proportional Valves	19
2.4.5 Full-receiver Alarm Devices.....	19
2.4.6 Feed Port Magnet.....	19
3. Installation and Debugging	20
3.1 Installation Notice.....	21
3.2 Installation Place.....	22
4. Operation Guide	23
4.1 Startup Pretest.....	23
4.1.1 Before the First Startup	23
4.1.2 After Startup for 2 Hours.....	23

4.1.3	After Startup for 20-30 Hours	24
4.2	Circuit Connection.....	24
4.3	Open the Feed Box and Storage Bin	24
4.3.1	Open the Feed Box	24
4.3.2	Open the Storage Bin	25
4.4	Shut the Feed Box and Storage Bin.....	25
4.4.1	Shut the Feed Box.....	25
4.4.2	Shut the Storage Bin	25
4.5	Start and Stop the Granulator	26
4.6	Motor Reversed Protective Function.....	27
5.	Trouble-shooting.....	28
5.1	Granulator Can Not Work	28
5.2	Stop Due to Other Reasons.....	29
6.	Maintenance and Repair	30
6.1	Repair	30
6.1.1	Replace the Blades	30
6.2	Installation of Bearing and Cutter Shaft	32
6.3	Installation of Feed Box, Feed Port and Storage Bin	34
6.4	Cutting Chamber Disassembly	35
6.4.1	Gear box dismantlement	35
6.4.2	Dismantlement of left / right bearing base	35
6.4.3	Bearing Dismantlement	36
6.5	Installation of Reduction Gear.....	37
6.6	Transmission	38
6.6.1	Maintenance of Reduction Gear.....	38
6.7	Check and Maintenance of Gear box.....	38
6.8	Maintenance	39
6.8.1	Daily Check	39
6.8.2	Weekly Check	40
6.8.3	Monthly Check.....	40
6.9	Cleaning.....	40
6.10	Maintenance Schedule	42
6.10.1	About the Machine.....	42
6.10.2	Check after Installation	42

6.10.3 Daily Check	42
6.10.4 Weekly Check	42
6.10.5 Monthly Check.....	42
6.10.6 Check Half-yearly or Every 1000 Running Hours	43
6.10.7 3 year Checking	43

Table index

Table 3-1: Cutters and other fixing screw torque.....	21
---	----

Picture index

Picture 2-1: Emergency Stop.....	15
Picture 2-2: Safety Switch	16
Picture 2-3: Electrical Components Description	17
Picture 3-1: Installation Notice	21
Picture 3-2: Installation Place	22
Picture 4-1: Open the Feed Box	25
Picture 4-2: Main Power Switch.....	26
Picture 4-3: START, Emergency Stop and STOP Button	26
Picture 4-4: Motor Reversed Protection.....	27
Picture 6-1: Blades Maintenance.....	31
Picture 6-2: Dismantle Fixed Blades.....	31
Picture 6-3: Dismantle Rotate Blades.....	31
Picture 6-4: Installation of Bearing and Cutter Shaft 1.....	32
Picture 6-5: Installation of Bearing and Cutter Shaft 2.....	33
Picture 6-6: Installation of Bearing and Cutter Shaft 3.....	33
Picture 6-7: Installation of Teeth Cutter and Fixed Blade	33
Picture 6-8: Installation of Feed Box, Feed Port and Storage Bin 1	34
Picture 6-9: Installation of Feed Box, Feed Port and Storage Bin 2	34
Picture 6-10: Installation of Feed Box, Feed Port and Storage Box 3	34
Picture 6-11: Installation of Feed Box, Feed Port and Storage Box 5	35
Picture 6-12: Step 1 of Gear box Dismantlement.....	35

Picture 6-13: Step 1 of Left /Right Bearing Base Dismantlement	35
Picture 6-14: Step 2 of Left / Right Bearing Base Dismantlement	36
Picture 6-15: Step 3 of Left/ Right Bearing Base Dismantlement	36
Picture 6-16: Step 1 of Bearing Dismantlement	36
Picture 6-17: Step 2 of Bearing Dismantlement	37
Picture 6-18: Step 3 of Bearing Dismantlement	37
Picture 6-19: Installation of Reduction Gear 1	37
Picture 6-20: Installation of Reduction Gear 2	38
Picture 6-21: Installation of Reduction Gear 3	38
Picture 6-22: Star Screws	40
Picture 6-23: Machine Cleaning	41

1. General Description



Please read this manual carefully before using this machine in order to operate correctly against any damage caused due to improper operation.




Note!

Always take great care when the knives are within reach, they are very sharp and can cause personal injury.




Forbidden to process flammable or toxic material!

SG-24N series granulators operate in super low speed to cut materials into well-proportioned granules. There are least dusts produced in the cutting process. Multiple security devices ensure high safety grade; automatic reverse running function ensures continuous operation. This series of screenless granulators are suitable for granulating hard and thick materials.

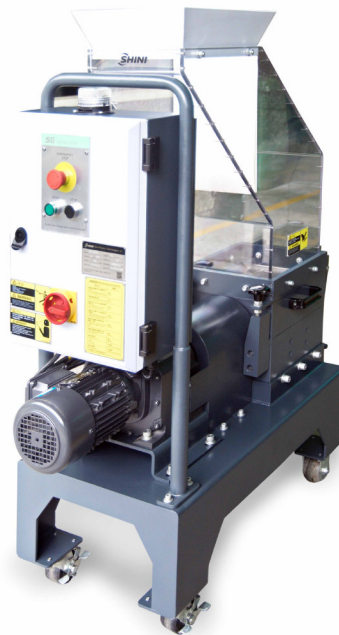

Model: SG-2427N

1.1 Coding Principle

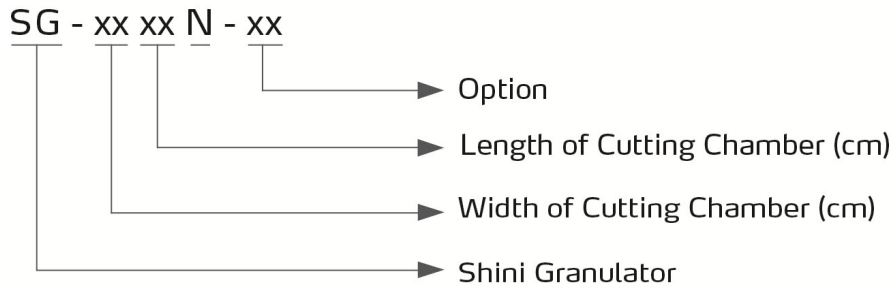

1.2 Feature

- Adopting gear box of foreign brand, SG-14/24N series features steady performance, long service life and large transfer torque.
- SG-14/24N series teeth cutters and cutting blades are integrally fitted in one cutting chamber.
- New-type inclined teeth cutter reduces the possibility of stress concentration, enhance bearing capacity and converts force direction so that cutter lifespan can be prolonged.
- SG-24N series adopt moment arm flange to secure reduction gear, making running smooth with low noise.
- When motor blockage occurs, the machine will alarm visibly and enable motor of run reversely. It resumes normal operation automatically after the trouble is clear.
- European type appearance, compact in size and easy to access for cleaning and maintenance.
- Transparent PC feeding hopper.
- Screenless design, well-proportioned size of regrinds and least amount of dusts. Regrinds could be used with virgin materials.

All service work should be carried out by a person with technical training or corresponding professional experience. The manual contains instructions for both handling and servicing. Chapter 6, which contains service instructions intended for service engineers. Other chapters contain instructions for the daily operator.

Any modifications of the machine must be approved by SHINI in order to avoid personal injury and damage to machine. We shall not be liable for any damage caused by unauthorized change of the machine.

Our company provides excellent after-sales service. Should you have any problem during using the machine, please contact the company or the local vendor.

Shini Hotline Service:

Headquarter and Taipei factory:

Tel: + 886 (0)2 2680 9119

Shini Plastics Technologies (Dongguan), Inc.:

Tel: +86 (0)769 8331 3588

Shini Plastics Technologies (Pinghu), Inc.:

Tel: +86 (0)573 8522 5288

Shinden Precision Machinery (Chongqing), Inc.:

+86 (0)23 6431 0898

1.3 Safety Regulations

Follow the instructions in this manual to avoid personal injury and damage to machine components.

The following safety measures shall be followed when operating the granulator.

1.3.1 Safety Signs and Labels



Electrical installation must only be done by a competent electrician!



Before the granulator is opened for servicing and maintenance, always disconnect the power with both the main switch and the control switch on the granulator.



Never put any part of your body through the granulator openings, unless both the main switch and the control switch on the granulator are in "OFF" position.



High voltage! danger!

This sign is attached on the control box and the wiring box.



Be careful with the rotating knives, they are very sharp and can cause personal injury!



The granulator should not be started before the feed box and storage box are properly closed.



Attention please!

Ear protection is used during granulating of plastic materials.



Make sure the power has been cut off before open the feed box.



SG-24N Granulators can not deal with fibre added material.



Attention !

No need for regular inspection because all the electrical parts in the control unit are fixed tightly !

1.3.2 Transportation and Storage of the Machine

Transportation

- 1) SG-24N series of granulators are packed in plywood cases with wooden pallet at the bottom, suitable for quick positioning by fork lift.
- 2) After unpacked, castors equipped on the machine can be used for ease of movement.
- 3) Do not rotate the machine and avoid collision with other objects during transportation to prevent improper functioning.
- 4) The structure of the machine is well-balanced, although it should also be handled with care when lifting the machine for fear of falling down.
- 5) The machine and its attached parts can be kept at a temperature from -25°C to $+55^{\circ}\text{C}$ for long distance transportation and for a short distance, it can be transported with temperature under $+70^{\circ}\text{C}$.

Storage

- 1) SG-24N series should be stored indoors with temperature kept from 5°C to 40°C and humidity below 80%.
- 2) Disconnect all power supply and turn off main switch and exigency stop switch.
- 3) Keep the whole machine, especially the electrical components away from water to avoid potential troubles caused by the water.
- 4) Use plastic film to cover the machine tightly to prevent the machine from dust and rains.

Working environment

The machine should be operated:

- 1) Indoors in a dry environment with max. temperature $+45^{\circ}\text{C}$ and humidity no more than 80%.

Do not use the machine:



- 1) If it is with a damaged cord.
- 2) On a wet floor or when it is exposed to rain to avoid electric shock.
- 3) If it has been dropped or damaged until it is checked or fixed by a qualified serviceman.
- 4) This equipment works normally in the environment with altitude over 3000m.
- 5) At least 1m surrounding space is requested when this equipment is running. Keep this equipment away from flammable sources at least two meters.
- 6) In the work area of vibration and strong magnetic force.

Rejected parts disposal

When the equipment has run out its life time and can not be used any more, unplug the power supply and dispose of it properly according to local code.



Fire hazard!

In case of fire, CO₂ dry powder fire extinguisher should be applied.



Flammable materials or materials which are contaminated by flammable substances/liquid may not be processed in the granulator. Serious risk of fire or explosion may cause personnel injury.



It is very important to tighten the screw as required torque.



When process item is longer than feed port, please cut long items into half until the length is shorter before processing.



Please don't put materials into the granulator if they are thinner than 2 mm and are soft and flexible, like rubber.

1.4 Exemption Clause

The following statements clarify the responsibilities and regulations born by any buyer or user who purchases products and accessories from Shini (including employees and agents).

Shini is exempted from liability for any costs, fees, claims and losses caused by reasons below:


- 1) Any careless or man-made installations, operation and maintenances upon machines without referring to the Manual prior to machine using.
- 2) Any incidents beyond human reasonable controls, which include man-made vicious or deliberate damages or abnormal power, and machine faults caused by irresistible natural disasters including fire, flood, storm and earthquake.
- 3) Any operational actions that are not authorized by Shini upon machine, including adding or replacing accessories, dismantling, delivering or repairing.
- 4) Employing consumables or oil media that are not appointed by Shini.

2. Structural Features and Working Principle

2.1 General Description

SG-24N series are belong to "by the press" granulator, which mainly works with the injection molding machine to crush a small amount of material. When crushing, don't input excessive materials. The granulator are controlled by main power switch, emergency stop button, start button, stop button and safety switches.

2.1.1 Working Principle

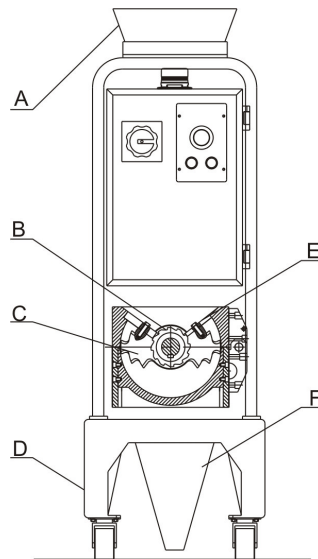

Parts name:

A. Feed box B. Teeth cutter C. Staggered blade D. Knife bed E. Fixed blade F. Storage bin

Picture 2 1: Working Principle


The material is fed in via a feed box (A) and falls down to the teeth cutters(B), the block material is cutted by the staggered (C) and fixed blades (E), then the material is cutted into granule by (B) and (E). The granule directly fall into the storage bin (F), it does not need the screen. The cutting chamber is easy to open for cleaning and maintenance. After this, the granulate is ready for re-use in the production machine, or to be transported to a container for later use.

2.2 Safety System

To avoid accidental bodily injury during granulator running, a set of safety system has been designed. High-speed rotating cutter is located in the granulator and subject to accident. So safety system has been set up to protect bodily safety. In any cases, the safety system cannot be changed at random. Otherwise the machine will be under dangerous condition and subject to accident happening. The maintenance and preservation of safety system shall be done by professional staff. In case the safety system of granulator is changed, our company will not perform our commitment. The replacement of all spare parts will be done by SHINI Company.

2.2.1 Emergency Stop Switch


There is one red button on the control panel. Upon pushing it, the machine will stop running. Turn the button in the arrow direction as shown on the button, the button will reset (counter-clockwise).

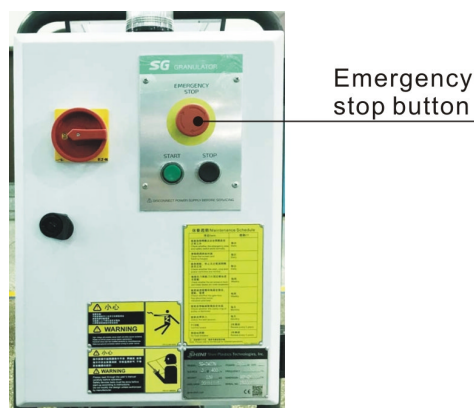

Picture 2-1: Emergency Stop

2.2.2 Safety Switch

On the granulator is equipped the safety position switch for circuit breaker. In case the position of feed box is changed or the breaker is loosened, it will cut off the power supply. There are two safety switches on the granulator: one is located between the feed box and the cutting chamber while the other one is between the storage bin and machine body.

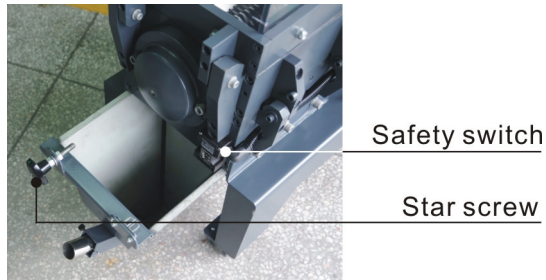

Picture 2-2: Safety Switch

2.2.3 Gate Lock


For opening feed box and cutting chamber, users need to loosen a long star screw (gate lock). It takes some time to unscrew the lock to completely stop cutter shaft and avoid personal injuries.

Notice before startup:

- 1) Check if feed box is tightened.
- 2) Check if plug of storage bin safety switch is tightened.
- 3) Check if there are foreign matters like metals in the cutting chamber.

2.3 Electrical Components Description

2.3.1 Thermal Overload Relay

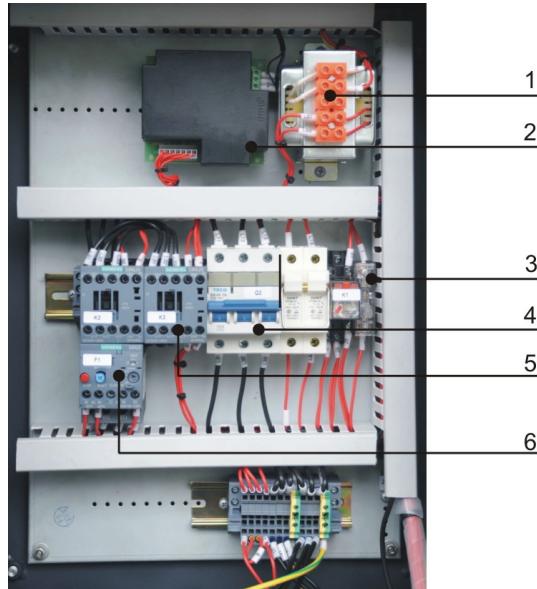


Picture 2-3: Electrical Components Description


1. Transformer, provide suitable voltage for control circuit.
2. Microcomputer control board (PCB) achieves granulator normal operation, material blockage reverse running and related alarm function.
3. Fuse, perform the function of overload and short phase protection.
4. Circuit breaker, isolate or short circuit protection.
5. Contactor, connect or disconnect circuit in a distance.
6. Overload relay, can protect the motor or default phase.

2.4 Options

2.4.1 30-second Instant Recycling System

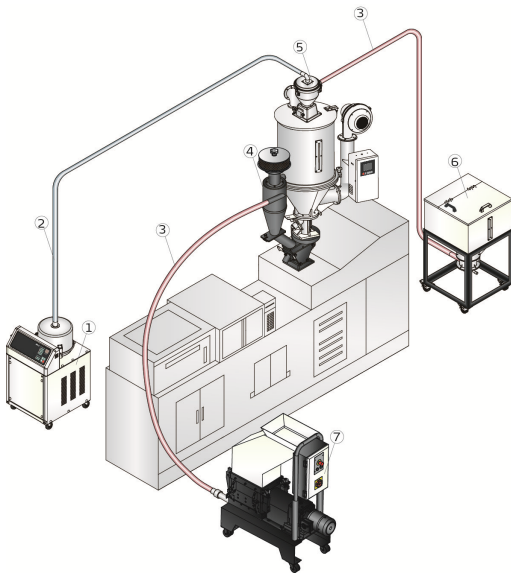

VR Type 30-Sec Instant Recycling

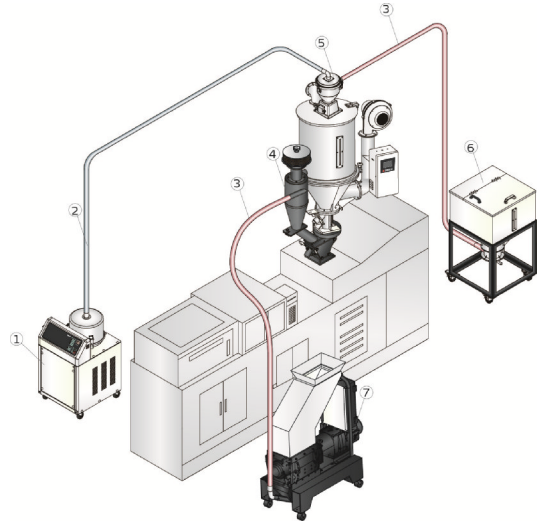

BR Type 30-Sec Instant Recycling

1. Hopper loader

2. Vacuum pipe

3. Material pipe

4. 30-Sec instant recycling system

5. Vacuum hopper

6. Material tank


7. Screenless granulator

2.4.2 Regrind Conveying via Blower & Cyclone (BC Type)



This device utilizes loading blower to convey regrind into the cyclone dust collector to separate the regrind from the air and then the regrind will fall into storage hopper or cloth bag.

2.4.3 Dust Separator (DS Type)

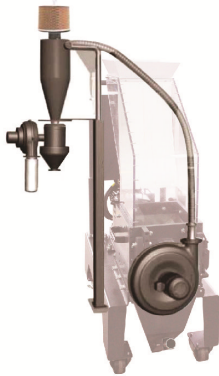


Dust Separator (DS type) can separate the dust in the regrind for immediate recycle use. The dust will be kept in filter bag, thus working environment will be maintained clean. This device ensures full use of regrind to avoid material wasting and enhance the economical returns.

2.4.4 Proportional Valves




Proportional valves mix regrind with new materials in a proper proportion, and then send them back to the IMM. It features easy installation and excellent accuracy. For details, please refer to the brochure of SPV-U.

2.4.5 Full-receiver Alarm Devices

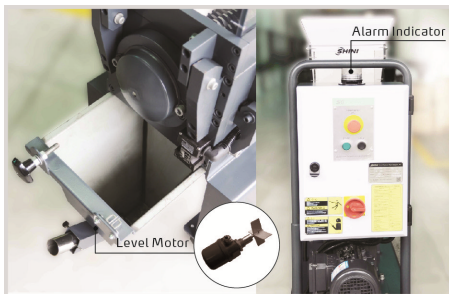

Full-receiver alarm device can help to realize unmanned operation and no materials will be wasted. Whenever the regrind level reaches the motor position, the machine will be forced to stop and be cut off via it is sensor, thus stop the granulator and warn the user by sounding an alarm.

2.4.6 Feed Port Magnet

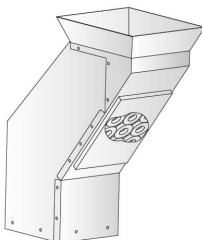

Optional feed port magnet can help to absorb metal impurities of the materials at the feed port. Add "FHM" at the end of the model code.

3. Installation and Debugging



Read through this chapter before installation.



Must abide by the following installation steps to avoid personnel injuries or damage of the machine!



Take great care of handing the blades because they are very sharp and may cause cutting injuries!



Power supply of the machine should be handled by qualified electricians!



Be careful!

Cutting blades must be put balanced, prevent it to rotate itself when do the installation. Keep hands from blades to avoid body injuries!



Attention:

Don't take other person's help to finish the installation, use a wooden board to block the rotating blade to finish it.



Notice!

Use protective gloves since the blades are very sharp.




Caution!

Must use new screw and washer to install the blade.

3.1 Installation Notice

- 1) Make sure voltage and frequency of the power source comply with those indicated on the manufacture's plate, which is attached to the machine.
- 2) Power cable and earth connections should conform with local regulations.
- 3) Use independent power cable and ON / OFF switch. The cable's dia. should not smaller than those applied in the control box.
- 4) The power cable connection terminals should be tightened securely.
- 5) The machine requires a 3-phase 4-wire power source, connect the power lead (L1, L2, L3) to the live wires, and the earth (PE) to the ground.
- 6) Power supply requirements:
Main power voltage: +/- 5%
Main power frequency: +/- 2%
- 7) Make at least 1 meter clearance around the machine to facilitate repair and maintenance.
- 8) Power connection refers to the circuit diagram of each model.

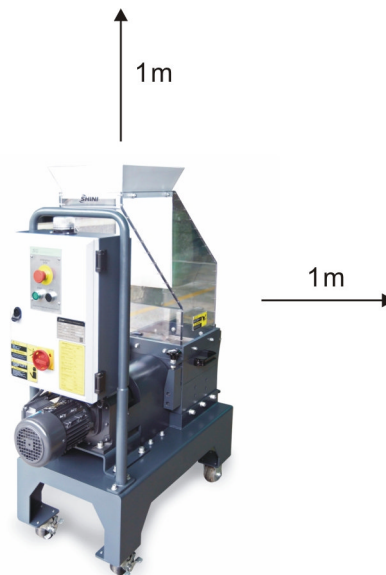


Picture 3-1: Installation Notice

Table 3-1: Cutters and other fixing screw torque

Thread size	M10	M12	M14	M16	M18	M20	M22	M24
Axial force (N)	23.8	34.5	47	65.5	78.5	103	129	149
Fixing torque (Nm)	50	86	135	215	290	420	570	730

3.2 Installation Place

Check and make sure the installation ground is level. There is enough intensity when it is running, and lockup the castors.

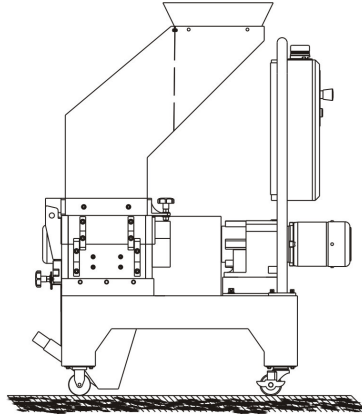

Picture 3-2: Installation Place

4. Operation Guide

Important: Wear gloves during operating to avoid personal injury!

Important: Wear goggles during operating to avoid personal injury!

Note: Blade or rotor may be loose, make sure check them before operation:

- 1) Check if blades are damaged and loose.***
- 2) Check if rotor is damaged and loose.***

Please contact Shini Company if any situation above has been found.

4.1 Startup Pretest

Unpainted part of the machine has been covered with antirust oil. Before use, the antirust oil should be cleaned.

- 1) Clean with a towel.
- 2) Wash with a towel dipping with amyl acetate.

4.1.1 Before the First Startup

- 1) Check whether the granulator is in the level state.
- 2) Check the space of the cutting tools to see whether the lockup screws of the blades are tightened.
- 3) Before granulation, ensure the rotation direction of main shaft is in line with that marked in nameplate.

4.1.2 After Startup for 2 Hours

- 1) Check the space of the cutting tools of the fixed blades and rotating blades again; check whether the lockup screws of the blades are loose.
- 2) Check the position-adjusting screws of the motor and check whether the position-adjusting screws are tightened.

4.1.3 After Startup for 20-30 Hours

After 20-30 hours machine running in full load, users need to check temperature on motor surface and check if there oil leaks.

4.2 Circuit Connection

Note: The installation of the granulator's circuit must be conducted by the professional electricians.

- 1) Check if feed box is fully closed;
- 2) Check if storage bin is fully closed;
- 3) Ensure the main power switch is in ON position.
- 4) Check if emergency stop is under action;
- 5) Start the granulator via pressing the START button and stop the granulator via pressing the STOP button.
- 6) The granulator needs some time to fully come to a halt; after full stop, check whether the running direction is clockwise.

Important: The cutting tools may be damaged and the granulating capability will be reduced if there is a wrong running direction. Please disconnect the power and transpose any two wires of the three in the main power.

4.3 Open the Feed Box and Storage Bin

Note: Before opening the feed box and the storage bin, turn off the main power switch and the power switch of the granulator.

Important: Be careful! The blade is very sharp, please take care.

4.3.1 Open the Feed Box

- 1) Check if the feed box has been emptied. If so, turn off the main power switch.
- 2) Loosen the long star screw and open the feed box.
- 3) Open feed box backwards.



Picture 4-1: Open the Feed Box

4.3.2 Open the Storage Bin

- 1) Turn off granulator power.
- 2) Loosen long star screw.
- 3) Pull out storage bin.

4.4 Shut the Feed Box and Storage Bin

4.4.1 Shut the Feed Box

Note: Make sure feed box is fully closed, otherwise machine would not start.

- 1) Check to ensure there is no powder left in the interface or corners.
- 2) Close the feed box forwardly.
- 3) Lock up the star screw and fix the feed box.

4.4.2 Shut the Storage Bin

Note: Before closing, clean the interface surface.

Be careful: Don't get squeezed and injured.

- 1) Check no powder or leftover material around the storage box; timely remove them if any.
- 2) Push the storage bin inwards along its slideway.
- 3) Lock up long star screw and fix storage bin.

4.5 Start and Stop the Granulator

The granulator is controlled by main power switch, safety switch, START/STOP button and emergency stop button.

Main power switch is located at the front control panel. And the startup and stop of the machine is controlled through rotating the main power switch.




Picture 4-2: Main Power Switch

START button and STOP button:

These two buttons control the startup and stop of the machine.

Emergency stop:

This switch can protect and stop machine when accidents happens.

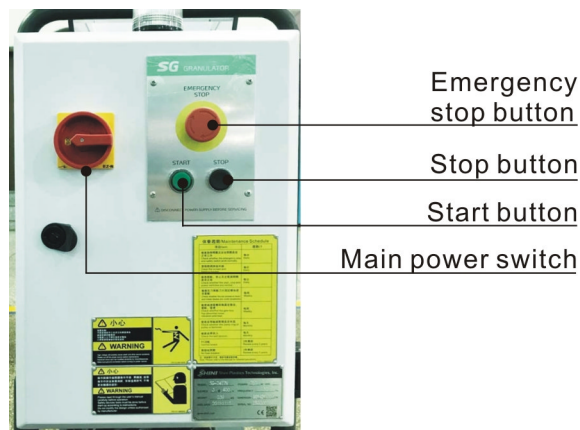


Picture 4-3: START, Emergency Stop and STOP Button

Note: If there are ungrinded materials in the feed box or cutting chamber, the granulator shall NOT be stopped, otherwise raw materials will block the rotor and the motor will be overloaded next time you start the machine up.

4.6 Motor Reversed Protective Function

When there are hard material appear in the feed box and cutting chamber or for other reason the cutting blades can not cut, this unit will enable blade shaft reverse rotating with alarm, it resumes normal operation automatically after 3 seconds later, so to keep granulating material. The alarm dies out after blade shaft rotates normally. If the motor reverse function be started over 3-4 times or more, the motor would be stopped. At this time you can press down the STOP button to cut off the power, and then restart it by press the START button.

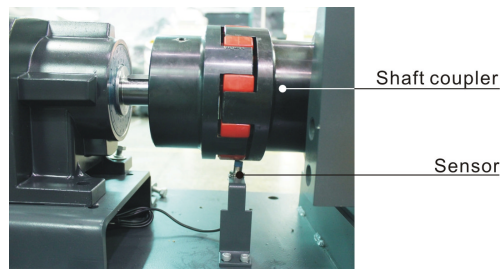

Picture 4-4: Motor Reversed Protection

If the rotor has been seized during operation, its working mode is:

Rotor is seized up, auto stop for 1 sec. → reverse rotate for 3 secs → stop for 1 sec → normal rotate →

A. 1) normal → working

2) seized up → stop for 1 sec. → reverse rotate for 3 secs → stop for 1 sec → normal rotate

B. 1) normal → working

2) seized up → stop for 1 sec. → reverse rotate for 3 secs. → stop for 1 sec → normal rotate

C. 1) normal → working


2) seized up → machine stops

Note: Mount sensor and ensure its space with shaft coupler to about 2~4mm.

5. Trouble-shooting

5.1 Granulator Can Not Work

- 1) Check if the emergency stop has been reset or not. If not, rotate the button anti-clockwise to reset it.
- 2) Check if the safety switch between feed box and storage box is completely closed. If not, machine can not be started.
- 3) Checking overload protector of the motor. The overload protector in the electrical control box will work if the motor overloads. Test white key (A) turn left, press the “Reset” button (B) to reset it. Before it starts again, check whether there is any powder left in the granulator.
- 4) Check the overload protector of the feeding blower's motor. If the feeding blower does not run, the granulator can run neither. Check the motor protector in the electric control box. If the protector is closed, the switch will be at “0” position, reset it to “1” position. Check if there’s no leftover, then re-start the machine. Test the white key(A) turn left, press” Reset” key (B) to reset it.
- 5) Check the clearance between the blades. The stop will happen or the motor overload protector will work if the blade is very blunt or the space between blades is not correct. Protector will be tripped if motor is overload. Blades should be checked, replaced or adjusted between the blades.
- 6) The contactor is burnt down or the control circuit is break off.

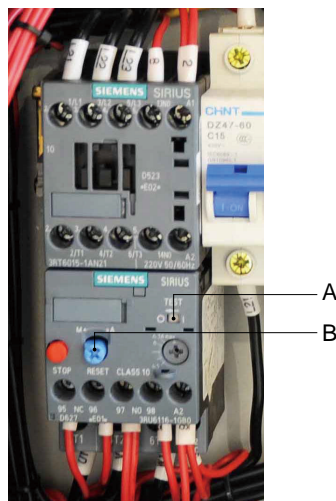


5.2 Stop Due to Other Reasons

Connection failure or looseness of safety switch can also cause shutdown.

Note: Do not disconnect to safety switch or control switch.

6. Maintenance and Repair

6.1 Repair

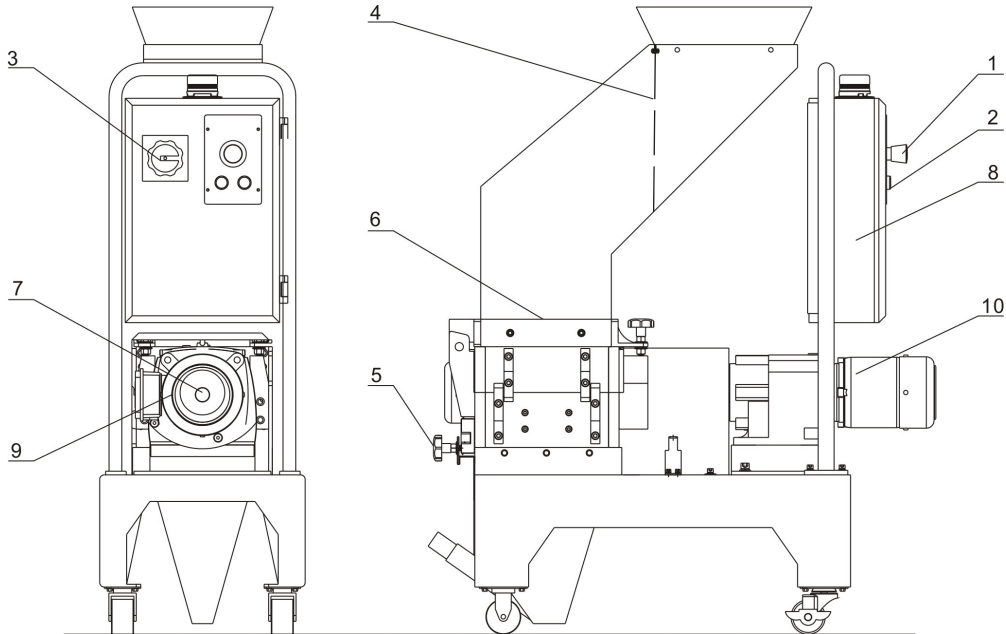

1. Check whether emergency stop works normally. Period: Daily
2. Check whether START/STOP button works normally. Period: Daily
3. Check whether main power switch works normally. Period: Daily
4. Check whether material stopper is intact before startup. Period: Daily
5. Check whether star screws in feed box and storage bin are tightened.
Period: Daily
6. Check whether there is metal in cutting chamber. Period: Daily
7. Check whether cutter shaft rotates as showed in the nameplate. Period: Daily
8. Check whether electric joints are loose in control cabinet. Period: Weekly
9. Check whether fixed screws are loose. Period: Monthly
10. Check whether oil of reduction gear. Period: Half yearly

6.1.1 Replace the Blades

***Note: Self-rotation also happens when barycenter is unstable.
Wear gloves to avoid being cut and be careful of the sharp blades!***



Picture 6-1: Blades Maintenance

Note: To decrease the possibility of harm to other people, the replacement action must be conducted by oneself.

1. Remove the fixed blades

Note: To avoid self rotation, block the rotating blade with a thick wood block.

Note: Be careful with the sharp blades.


- 1) Remove the set screws.
- 2) Remove the fixed blades.
- 3) Clean the installation surface of the blades.



Picture 6-2: Dismantle Fixed Blades

2. Remove the rotating blades

- 1) Open the cutting chamber and loosen inner hex screws on bearing block.
- 2) Take out blade rest.
- 3) Clean the whole rotating blades and cutting chamber.

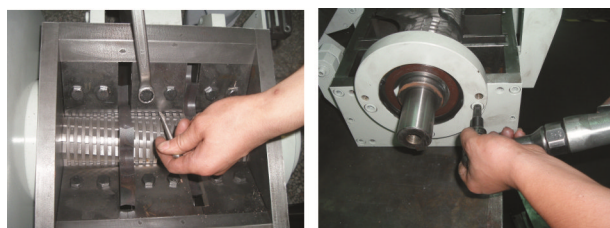

Picture 6-3: Dismantle Rotate Blades

Note: Press the pressing block and blade when you remove the last screw so to avoid personal injuries.

3. Install the blades

Clean carefully the fixed blades and rotating blades and then install them.


- 1) Install the rotating blades
- 2) Then the fixed blades
- 3) Finally the front fixed blades

Note: Each time to replace the blade, the screw and insulation ring must be replaced also.

Note: Inject screw thread fixing glue (light blue LOCTITE 243 recommended) to the fixing screw so to avoid slipping and tighten screws up.


6.2 Installation of Bearing and Cutter Shaft

- 1) Install the bearing 2. bearing washer 1. bearing sleeve 7 into the bearing base 3.
- 2) Insert the blade shaft 4 into the bearing sleeve vertically 7. Then sleeve the staggered blade 5 and the teeth blade 6 on the bearing spacing.

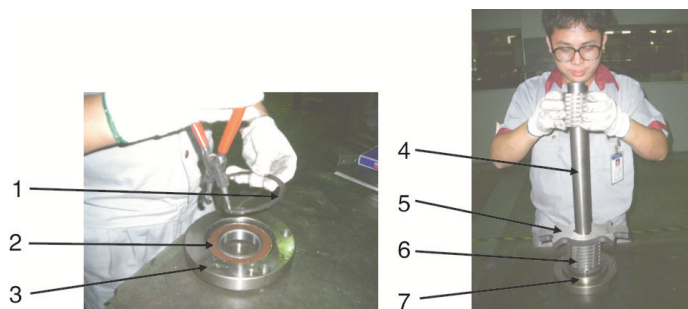

Picture 6-4: Installation of Bearing and Cutter Shaft 1

- 3) Put the Cutter Shaft 2 into the cutting chamber 1, let both terminals of the bearing tallies with the grooves.

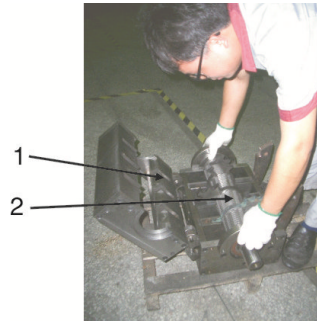

Picture 6-5: Installation of Bearing and Cutter Shaft 2


- 4) Fix the bearing base on the cutting chamber.



Picture 6-6: Installation of Bearing and Cutter Shaft 3

Note: Daub the lubrication on the bearing and bearing base. Use proper twisting force to lock the screw tightly.

- 5) Use a wrench to tight up all the screws on bearing block or cutting chamber and lock them up with right torque (M12×25).
- 6) After installed the rotating Cutter Shaft to the housing, mount fixed blades that correspond with teeth cutters on pressing block and align their holes. Lockup the fixing screw (LOCTITE243 thread fixing glue is recommended). (Fixing screw for front fixed blade is M10×30, while for back fixed blade is M10×35).

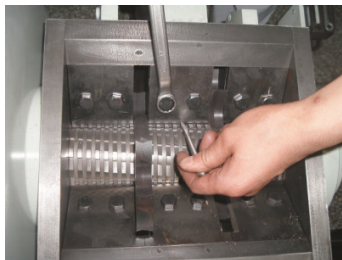


Picture 6-7: Installation of Teeth Cutter and Fixed Blade

Note: In order to avoid personal injury and machine damage, the lockup screws has to be tightened.

Note: Blades are extremely sharp; to avoid injuries, please waer gloves before and during installation.

6.3 Installation of Feed Box, Feed Port and Storage Bin

- 1) Lift up the feed box to fix it onto the cutting chamber with screws (M8×35).

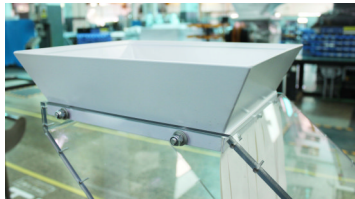


Picture 6-8: Installation of Feed Box, Feed Port and Storage Bin 1

- 2) Put the feed box on the cutting chamber, insert the rotation shaft of feed box (BH10184900010) into the hole, and then use the inner hexagon screw (M8×20) to lock up both ends.




Picture 6-9: Installation of Feed Box, Feed Port and Storage Bin 2

- 3) Hold the storage bin with both hands and push it into its right position along the slide way.

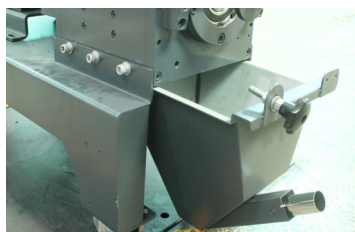

Picture 6-10: Installation of Feed Box, Feed Port and Storage Box 3

- 4) Lock up plum blossom handle.

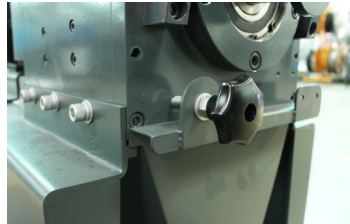


Picture 6-11: Installation of Feed Box, Feed Port and Storage Box 5

Note: Locknut is necessary for keeping screws falling into cutting chamber.

6.4 Cutting Chamber Disassembly

6.4.1 Gear box dismantlement


Dismantle the screw of gear box's fixed plate to push out the gear box directly outward to separate the coupler;

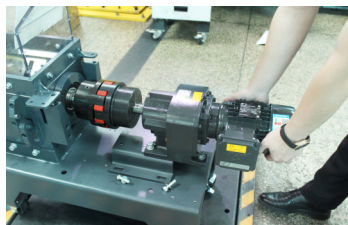

Picture 6-12: Step 1 of Gear box Dismantlement



6.4.2 Dismantlement of left / right bearing base

- 1) Firstly disassemble the fixing screws of right bearing base and take down the base;

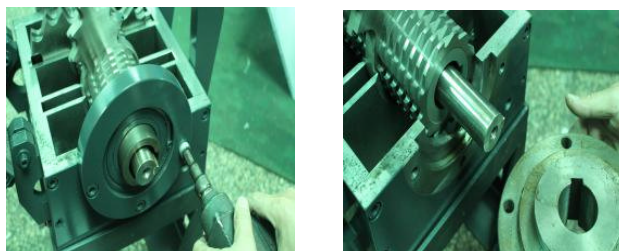


Picture 6-13: Step 1 of Left /Right Bearing Base Dismantlement

- 2) Disassemble the fixing screws of left bearing base, take down the base and the whole blade shaft together. Then dismantle the teeth cutter, staggered blade.

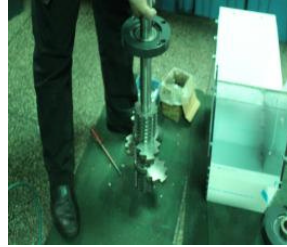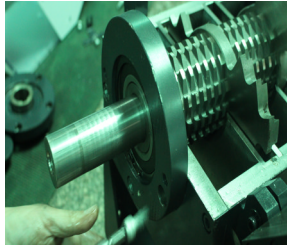

Picture 6-14: Step 2 of Left / Right Bearing Base Dismantlement


- 3) Dismantle the left bearing base, and then the left and right bearing bases are taken out.

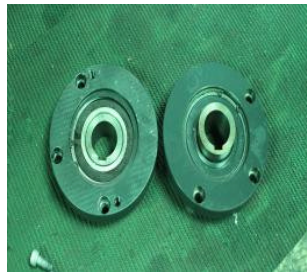

Picture 6-15: Step 3 of Left/ Right Bearing Base Dismantlement


6.4.3 Bearing Dismantlement

- 1) Put the fitted iron rod on the shaft sleeve, and use the copper stick to knock the top of the iron rod, then shaft sleeve is taken down.

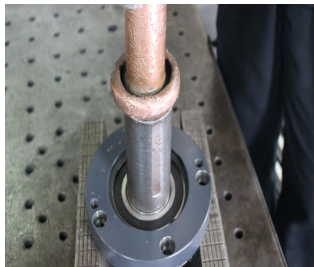


Picture 6-16: Step 1 of Bearing Dismantlement

- 2) Take out the circlip with the circlip plier

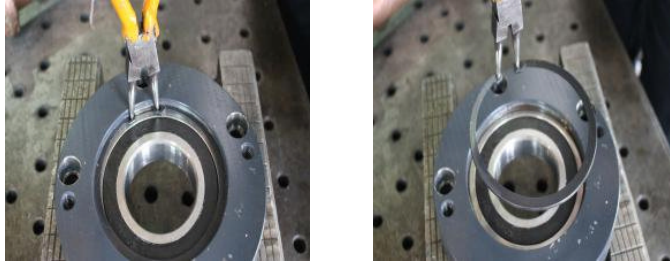

Picture 6-17: Step 2 of Bearing Dismantlement

- 3) Put the fitted iron rod on the bearing, and use the copper stick to knock the top of the iron rod, then bearing is taken down.

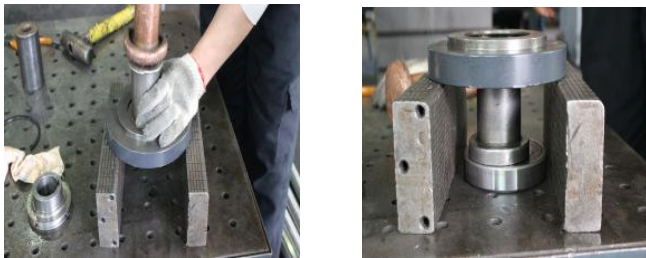


Picture 6-18: Step 3 of Bearing Dismantlement

6.5 Installation of Reduction Gear


Note: To stop blade rest shaft rotating while installation, use a thick wood block to stuck rotate blades!

- 1) Firstly, fix the gear box on the fixed plate, and use the hexagonal screw to fasten (M12×35).

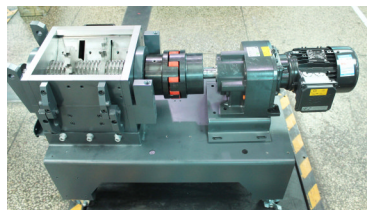


Picture 6-19: Installation of Reduction Gear 1

- 2) Use hexagon screw (M12×35) to fix the gear box's fixed plate on the base and lock the screw to fasten the motor.

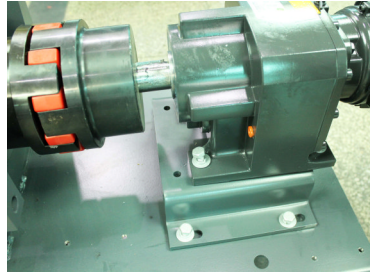

Picture 6-20: Installation of Reduction Gear 2

- 3) Install the sensor fixed plate M6×12.

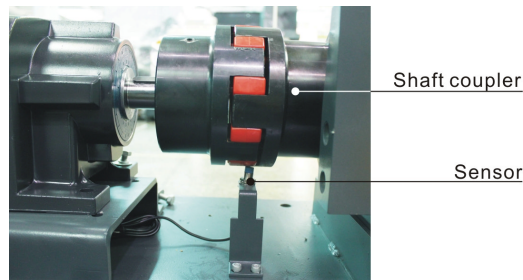

Picture 6-21: Installation of Reduction Gear 3

Note: The cutting blade rest shall be put stably and avoid cutter self-rotation. At the time of operating, hand shall stay away from the cutting tool to avoid bodily injury.

6.6 Transmission

6.6.1 Maintenance of Reduction Gear

Replace lubricating oil after initial motor running for 400 hours, and oil change period later would be 4000 hours running. There should be enough lubricating oil inside motor tank and inspect volume regularly. If oil volume is found to be decreased or oil quality to be deteriorated, supply or renew oil immediately. Note that keep the appearance of mixing motor and gear box clean by dedusting .

6.7 Check and Maintenance of Gear box

Check lubricating oil for every six months or after 3000 hours in operation

- 1) Check oil level:
 - a) Cut power off so to avoid electric shock and wait till the motor get cooled.
 - b) Remove oil level plug to check if the oil has been filled up full.
 - c) Install oil level plug.

- 2) Check the lubricating oil:
 - a) Cut power off so to avoid electric shock and wait till the motor get cooled.
 - b) Open oil drain plug to take samples.
 - c) Check viscosity index of the lubricating oil.
If it is evidently turbid, please replace it as soon as possible.
 - d) Check the lubricating oil level and install oil level plug.

- 3) Lubricating oil replacement: Increased viscosity of the lubricating oil will make it harder to discharge the oil, so better replace it when the motor is in its operational temp.
 - a) Cut power off so to avoid electric shock.
 - b) Lay an oil pan under the oil drainage plug.
 - c) Open the oil level plug, air valve and oil drainage plug.
 - d) Drain all the lubricating oil out.
 - e) Install oil drainage plug.
 - f) Fill in new lubricating oil in same brand.
 - g) Tight up the oil level plug and air valve.

- 4) Brand of lubricating oils (ambient temperature : -10°C~40°C):
 - Mobil: Mobilgear 630
 - Shell: Shell Omala 220
 - Aral: Aral Degol BG 220
 - BP: BP Energol GR-XP 220
 - Texaco: Meropa 220

6.8 Maintenance


When carrying out maintenance, ensure that there is no material left in the granulator.

Note: All repairing must be conducted by professionals!

6.8.1 Daily Check

- 1) There is rubber shutter in the feed box. If the rubber shutter is damaged, replace it immediately. Otherwise the fragment of the shutter will damage the blades in the cutting chamber.

- 2) Check whether the Emergency Stop works properly. Start the machine and then stop it via Emergency Stop. Rotate the button anti-clockwise to reset the Emergency Stop.
- 3) Check the main power switch, start/stop button.
- 4) Check the reversed rotating function.
- 5) Check star screw, safety screw is part of granulator' safety system, its length is pre-designed, when the screw is loosen, and the granulator will stop working so to protect the machine. The thread length of the safety screw is 60 mm, damaged screw needs to be replaced by a new one.

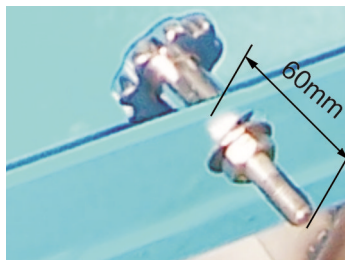

Picture 6-22: Star Screws

6.8.2 Weekly Check

- 1) Check the power wire to see whether there is any damage. If so, replace it immediately.
- 2) Check the safety switch.
- 3) Check whether there is looseness in electrical connections.

6.8.3 Monthly Check


- 1) Check whether blades are loose or abraded.

6.9 Cleaning

Note: The blade may do harm to human body when opening the feed box!

- 1) Check whether the feed box is emptied before stopping the machine.
- 2) Clean the exterior surface of the feed box.
- 3) Turn off the main power switch.
- 4) Clean the shutter of the feed box with a dust separator.
- 5) Unscrew the star knob to open the feed box backward.

- 6) Clean the interior surface of the feed box.
- 7) Clean both surfaces of the cutting chamber; open the upper cutting chamber and to clean the remained material by using revolving rod to turn the blade shaft.
- 8) Unscrew star screw and take out storage bin.
- 9) Clean storage bin.
- 10) Clean the belt pulleys with bright dust-precipitator.

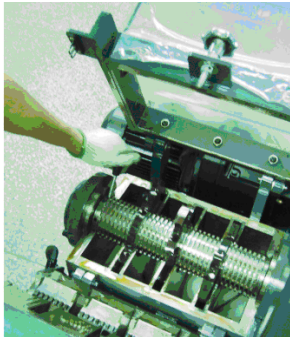

Picture 6-23: Machine Cleaning

Note: Finish step 9 for every time of machine cleaning and also it at least has to be done for one time after 300 hours in operation.

6.10 Maintenance Schedule

6.10.1 About the Machine

Model _____ SN _____ Manufacture date _____

Voltage _____ Φ _____ V Frequency _____ Hz Power _____ kW

6.10.2 Check after Installation

- Check if the lockup screws of the fixed blades are locked firmly.
- Check whether star screws are tightened.
- Check if the flange of the speed reducer has been locked firmly.

Electrical Installation

- Voltage: _____ V _____ Hz
- Specs of the fuse: 1 Phase _____ A 3 Phase _____ A
- Check phase sequence of the power supply.

6.10.3 Daily Check

- Check main power switch.
- Check emergency stop button.
- Check start / stop button.
- Check material check plate (strip) is perfect or not.
- Check whether emergency stop and safety switch works normally.
- Clean cutting chamber and feeding hooper.
- Check whether start, stop and power switches are normal.

6.10.4 Weekly Check

- Check all the electrical cables.
- Check if there are loose connections of electrical components.
- Check whether fixed screw loose for the blade.
- Check if there is abnormal noise, vibration and heat in reduction gear.
- Check the cracking window

6.10.5 Monthly Check

- Check the status of the belt.
- Check the overload protection function of the motor.
- Check the tightness of the blades.

6.10.6 Check Half-yearly or Every 1000 Running Hours

- Check or replace lubrication for gear box.
- Check lubrication of bearing.
- Evaluation of the machine condition.

6.10.7 3 year Checking

- PC board renewal.
- No fuse breaker renewal.